

## PREFACE

No : **IB29A**

Thank you for selecting a Hero MotoCorp **XPULSE 200**. We wish you many miles of continued riding pleasure in the years ahead.

We, at Hero MotoCorp, are committed to demonstrate excellence in our environment performance on a continual basis, as an intrinsic element of our corporate philosophy. To achieve this we commit ourselves to continue product innovations to improve environment compatibility and strengthen the green supply chain. We are also using non asbestos brake shoes and engine gaskets which are environment friendly in nature.

This booklet is your guide to the basic operation and maintenance of your new HERO MotoCorp **XPULSE 200**. Please take time to read it carefully. As with any fine machine, proper care and maintenance are essential for trouble-free operation and optimum performance.

Authorised Distributor or dealer(s) of the Distributor (“**Dealer**”) will be glad to provide you further information or assistance and to handle your future service needs.

Let us make this world a safer, healthier and more environment friendly place.

 **NOTE**

**ALL INFORMATION, ILLUSTRATION, PHOTOGRAPH, DIRECTIONS, SPECIFICATIONS AND OTHER CONTENTS COVERED IN THIS OWNER'S MANUAL ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF ITS PRINTING APPROVAL, AND THE ACCURACY OR CORRECTNESS OF THE SAME IS NOT UNDERTAKEN OR GUARANTEED.**

Hero MotoCorp Ltd **RESERVES THE RIGHT TO MAKE CHANGES IN ITS CONTENTS AT ANY TIME WITHOUT NOTICE AND/OR INCURRING ANY OBLIGATION, WHATSOEVER. NO ONE IS ALLOWED TO REPRODUCE ANY PART OF THIS PUBLICATION WITHOUT OBTAINING PRIOR WRITTEN PERMISSION FROM** Hero MotoCorp Ltd.

# CONTENTS

	Pg. No.		Pg. No.
VEHICLE IDENTIFICATION	1	OIL FILTER SCREEN & CENTRIFUGAL FILTER	
VEHICLE VIEWS	2	CLEANING	47
VEHICLE SPECIFICATION	7	AIR CLEANER	49
VEHICLE SAFETY	9	CARBURETOR	50
• Important safety information	9	VALVE CLEARANCE ADJUSTMENT	51
• Protective apparel	10	CLUTCH LEVER FREE PLAY	52
• Off-Road safety	11	THROTTLE OPERATION	53
• Load limits and guidelines	11	BYSTARTER OPERATION	54
• Accessories & modifications	13	DRIVE CHAIN SLACKNESS	54
ANTI-THEFT TIPS	13	DRIVE CHAIN SLIDER INSPECTION	57
SAFE RIDING TIPS	14	BRAKES	58
TIPS FOR HEALTHY ENVIRONMENT	15	SUSPENSION	60
PART FUNCTION	16	WHEEL	61
• Ignition switch	16	MAIN STAND (OPTIONAL)/	
• Instruments and indicators	17	SIDE STAND LUBRICATION	63
• LCD panel	19	TYRES	64
FEATURES	22	NUT, BOLTS & FASTENERS	66
HANDLEBAR SWITCHES CONTROL	29	BATTERY	66
ABS INDICATOR	30	FUSE REPLACEMENT	68
SIDE STAND INDICATOR/SWITCH	31	STOP LAMP SWITCH	69
FUEL TANK	31	HEADLAMP FOCUS ADJUSTMENT	69
FUEL VALVE	32	CATALYTIC CONVERTER	70
SEAT LOCK	33	AIR SUCTION VALVE (ASV)	70
USB CHARGER	34	EVAPORATIVE EMISSION CONTROL SYSTEM	71
PRE-RIDE INSPECTION	35	POLISHING OF VEHICLE	71
STARTING THE ENGINE	36	BASIC TROUBLESHOOTING	72
RIDING/BRAKING	37	NAVIGATION SIGNS	74
PARKING/TOOL KIT	39	DELIVERY CERTIFICATE	
CLEANING AND WASHING OF VEHICLE	40	HERO GENUINE PARTS	
MAINTENANCE	40	JOB APPLICABLE TO PERIODIC SERVICES	
SAFETY PRECAUTION	41	SERVICE RECORD SHEET	
MAINTENANCE SCHEDULE	42	SERVICE ADVICE SHEET	
SPARK PLUG INSPECTION	45	OWNERSHIP RECORD AND DATA	
ENGINE OIL	45		

The logo features a stylized icon on the left consisting of a red vertical bar and two black triangles pointing towards each other. To the right of the icon, the word "Hero" is written in a bold, red, sans-serif font. Below "Hero", the word "WeCare" is written in a bold, black, sans-serif font.

**Hero**  
**WeCare**

## VEHICLE IDENTIFICATION



### Vehicle Identification Number (VIN)

Location: Stamped on the right side of the steering head tube.

### Engine No.

Location: Stamped on the lower side of the left crankcase.

**VIN: MBLLDLO1#####**

<b>MBL</b>	<b>LDLO1</b>	<b>#</b>	<b>#</b>	<b>#</b>	<b>#</b>	<b>#####</b>
Manufacturer code	Vehicle Description	Check Digit	Model Year	Plant Code	Month of Manufacturing	Production Serial Number

**Engine No.: MC20AE#####**

<b>MC20AE</b>	<b>#</b>	<b>#</b>	<b>#</b>	<b>#####</b>
Engine Description	Year of Manufacturing	Assembly Plant	Month of Manufacturing	Serial Number

**Model: XPULSE 200**


<b>Variants</b>	<b>VIN</b>	<b>Engine</b>
Electric start/Front disc with ABS/Rear disc/Spoke wheel	LDLO1	MC20AE

### VIN and Engine No. may be required:

- During registration of the vehicle.
- For dealing with legal & insurance departments.

## FRONT VIEW

## VEHICLE VIEWS

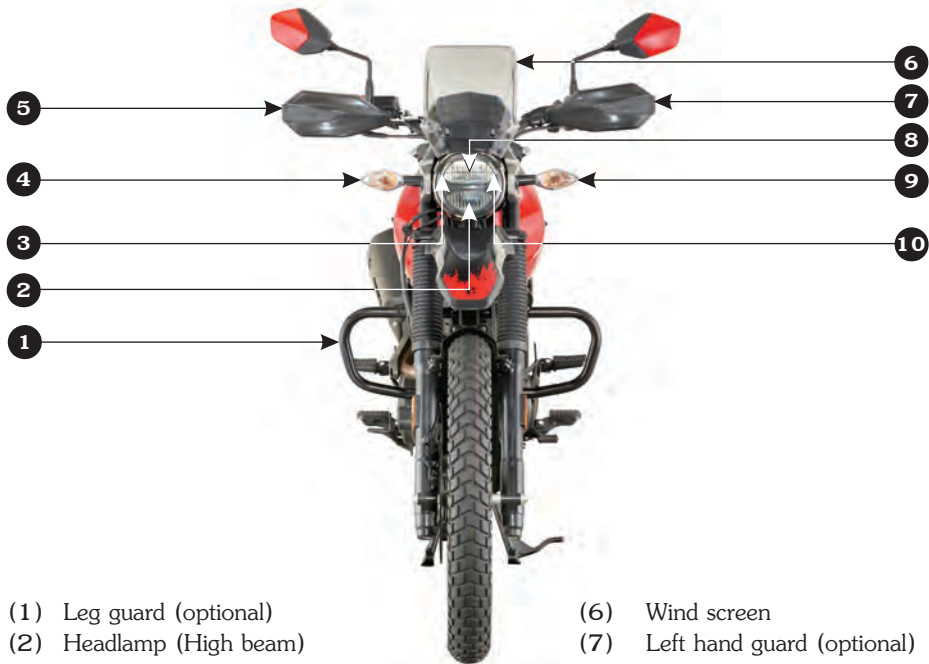

- (1) Leg guard (optional)
- (2) Headlamp (High beam)
- (3) Right position lamp
- (4) Front right turn signal lamp
- (5) Right hand guard (optional)

- (6) Wind screen
- (7) Left hand guard (optional)
- (8) Headlamp (Low beam)
- (9) Front left turn signal lamp
- (10) Left position lamp

**\*Accessories and features shown may not be part of standard fitment.**

## REAR VIEW




- (1) Rear fender
- (2) Rear reflex reflector
- (3) Left rear turn signal lamp
- (4) Tail/stop lamp

- (5) Licence plate lamp
- (6) Right rear turn signal lamp
- (7) Rear brake fluid reservoir

**\*Accessories and features shown may not be part of standard fitment.**

## TOP VIEW

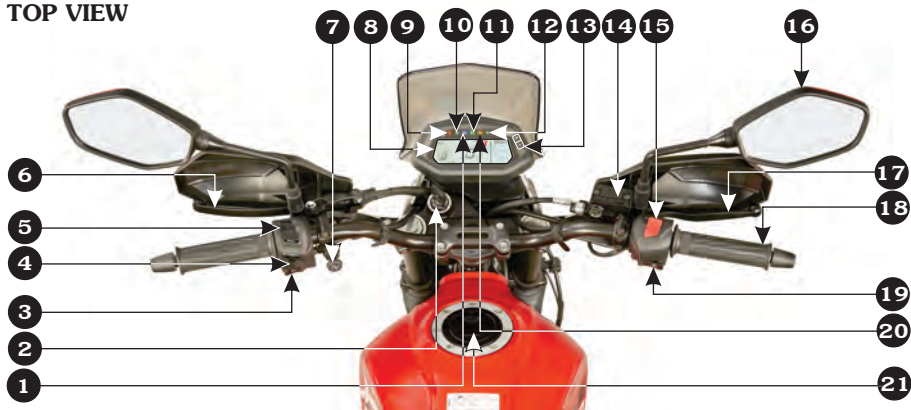

- |   |  |
|---|--|
| (1) High beam indicator   | (10) Left turn signal indicator            |
| (2) Ignition switch with key  | (11) Neutral indicator                     |
| (3) Horn switch   | (12) Right turn signal indicator           |
| (4) Turn signal switch  | (13) Mode (M) and Set (S) buttons          |
| (5) Pass lamp switch  | (14) Front brake master cylinder/Reservoir |
| (6) Clutch lever  | (15) Engine stop switch                    |
| (7) Bystarter knob  | (16) Rear view mirrors                     |
| (8) LCD panel of Meter console. refer instruments and indicators <b>(page 17)</b> for fuel gauge, speedometer and other features of console | (17) Front brake lever                     |
| (9) Side stand indicator  | (18) Throttle grip                         |
|   | (19) Electric starter switch               |
|   | (20) ABS indicator                         |
|   | (21) Fuel tank cap                         |

**\*Accessories and features shown may not be part of standard fitment.**



## LEFT SIDE VIEW



- |                           |                           |                                   |
|---------------------------|---------------------------|-----------------------------------|
| (1) Side reflex reflector | (7) Main stand (optional) | (13) Seat                         |
| (2) Front hugger fender   | (8) Side stand            | (14) Left side cover              |
| (3) Fuel valve            | (9) Pillion foot rest     | (15) Battery compartment (inside) |
| (4) Starter motor         | (10) Saree guard          | (16) Side stand switch            |
| (5) Gear shift pedal      | (11) Seat lock            | (17) Air suction valve            |
| (6) Rider footrest        | (12) Rear grip            | (18) Front fender                 |

**\*Accessories and features shown may not be part of standard fitment.**



## VEHICLE SPECIFICATION

ITEM		SPECIFICATIONS
<b>Dimensions</b>		
Overall length		2222 mm
Overall width		850 mm
Overall height		1258 mm
Wheelbase		1410 mm
Saddle height		823 mm
Ground clearance		220 mm
<b>Weight</b>		
Kerb weight		153 kg
Pay load		130 kg
<b>Capacities</b>		
Engine oil		1200 ml at disassembly and 1070 ml at draining
Fuel tank capacity		13.0 litres
Fuel reserve capacity		2.0 litres (Usable)
Front fork oil at disassembly		353 cc (Per leg)
Hydraulic brake fluid		DoT-4/DoT-3
<b>Engine</b>		
Maximum power		13.5 kW @ 8000 rpm
Maximum torque		17.1 N-m @ 6500 rpm
Bore and stroke		66.5x57.5 mm
Compression ratio		10:01
Displacement		199.6 cc
Spark plug		NGK-CPR 8 EA9, BOSCH UR5DC
Spark plug gap		0.8-0.9 mm
Valve clearance	Intake (cold)	0.07 mm +0.01/-0.02
	Exhaust (cold)	0.09 mm +0.01/-0.02
Idle speed		1400±100 rpm
<b>Chassis and suspension</b>		
Front suspension		Telescopic front forks (dia 37 mm) with anti friction bush
Rear suspension		Rectangular swingarm with mono shock
Caster angle		27°

## VEHICLE SPECIFICATION

ITEM		SPECIFICATIONS
Trail length		114 mm
Tyre size	Front	90/90-21 M/C 54S
	Rear	120/80-18 M/C 62S
Tyre pressure	Front (Rider/pillion)	1.75 kgf/cm <sup>2</sup> (25 psi) / 1.75 kgf/cm <sup>2</sup> (25 psi)
	Rear (Rider/pillion)	2.30 kgf/cm <sup>2</sup> (33 psi) / 2.50 kgf/cm <sup>2</sup> (36 psi)
Brakes	Front (Disc type)	Dia. 276 mm
	Rear (Disc type)	Dia. 220 mm
<b>Transmission</b>		
Primary reduction		3.350 (67/20)
Final reduction		2.923 (38/13)
Transmission		5 Speed constant mesh
Gear ratio, 1 <sup>st</sup>		3.0769 (40/13)
2 <sup>nd</sup>		1.7895 (34/19)
3 <sup>rd</sup>		1.500 (30/20)
4 <sup>th</sup>		1.100 (22/20)
5 <sup>th</sup>		0.9583 (23/24)
<b>Electricals</b>		
Battery		12V-4 Ah, (ETZ-5) *MF Battery
Alternator		110 W @ 5000 rpm
Headlamp		12V-5.6W/9.3W (LED)
Position lamp		12V-0.9W (LED)
Tail/Stop lamp		12V-0.2/2.1W (LED)
Turn signal lamp		12V-10Wx4 nos. **MFR (Amber bulb-clear lens)
Meter illumination		LED
Neutral indicator		LED
Turn signal indicator (RH/LH)		LEDx2
Hi beam indicator		LED
ABS indicator		LED
Service reminder indicator		LCD display
Licence plate lamp		12V-5W
Side stand indicator		LED
Fuse		20A, 15A, 10A, 10A

\*MF stands for Maintenance Free

\*\*MFR stands for Multi-Focal Reflector type

## **VEHICLE SAFETY**

### **IMPORTANT SAFETY INFORMATION**

Your vehicle can provide many years of service and pleasure if you take responsibility for your own safety and understand the challenges you can meet on the road.

There is much that you can do to protect yourself when you ride. You will find many helpful recommendations through out this manual. Following are a few that we consider most important.

#### **Always wear a helmet**

It is a proven fact, helmet significantly reduces the number and severity of head injuries. So always wear a helmet and make sure your pillion rider does the same. We also recommend that you wear eye protection, sturdy boots, gloves and other protective gear.

#### **Before riding your vehicle**

Make sure that you are physically fit, mentally focused and free of alcohol and drugs. Check that you and your pillion are both wearing an approved vehicle helmet and protective apparel. Instruct your pillion on holding onto the grab rail or your waist, leaning with you in turns, and keeping their feet on the footrest, even when the vehicle is stopped.

#### **Take time to learn & practice your vehicle**

Even if you have ridden other vehicles, practice riding in a safe area to become familiar with how this vehicle works and handles, and to become accustomed to the vehicle's size and weight.

#### **Ride defensively**

Always pay due attention to other vehicles around you, and do not assume that other drivers see you. Be prepared to stop quickly or perform an evasive maneuver.

#### **Make yourself easily visible**

Some drivers do not see vehicles because they are not looking for them. To make yourself more visible, wear bright reflective clothing, position yourself so that others can see you, signal before turning or changing lanes, and use horn which will help others to notice you.

#### **Ride within your limits**

Pushing the limits is another major cause of vehicle accidents. Never ride beyond your personal abilities or faster than conditions demand. Remember that fatigue and negligence can significantly reduce your ability to make good judgements and ride safely.

#### **Do not drink and ride**

Riding under the influence of alcohol or drugs is dangerous. Alcohol can reduce your ability to respond to changing conditions and reduce the reaction time. Do not drink and ride.

#### **Keep your vehicle in safe condition**

For safe riding, its important to inspect your vehicle before every ride and perform all recommended maintenance. Never exceed load limits, and only use accessories that have been approved by Hero MotoCorp for this vehicle. See **(page 1 1)** for more details.

## If you are involved in a crash

Personal safety is your first priority. If you or anyone else has been injured, take time to assess the severity of the injuries and whether it is safe to continue riding. Call for emergency assistance if needed. Also follow applicable laws and regulations if another person or vehicle is involved in the crash.

If you decide to continue riding, first evaluate the condition of your vehicle. If the engine is still running, turn it off. Inspect for fluid leaks, check the tightness of critical nuts and bolts, and check the handlebar, brake levers, brakes, and wheels. Ride slowly and cautiously. Your vehicle may have suffered damage that is not immediately apparent. Have your vehicle thoroughly checked at a qualified service facility as soon as possible.

## PROTECTIVE APPAREL

For your safety, we strongly recommend that you always wear a helmet which should conform as per your country standards, in addition to eye protection, boots, gloves, long pants and a long sleeve shirt or jacket whenever you ride. Take care of loose/hanging clothes while solo/pillion riding. Although complete protection is not possible, wearing proper gear can reduce the chance of injury when you ride.

Following are suggestions to help you choose proper riding gear.



## WARNING

- **Not wearing a helmet increases the chance of serious injury or death in a crash.**
- **Be sure you and your pillion always wear a helmet, eye protection and other protective apparel when you ride.**

## Helmets and eye protection

Your helmet is your most important piece of riding gear because it offers the best protection against head injuries. A helmet should fit your head comfortably and securely. A bright coloured helmet can make you more noticeable in traffic, as can reflective strips.

An open-face helmet offers some protection, but a full-face helmet offers more. Always wear face shield or goggles to protect your eyes and help your vision.

## Additional riding gear

In addition to a helmet and eye protection, we also recommend:

- Sturdy boots with non-slip soles to help protect your feet and ankles.
- Leather gloves to keep your hands warm and help prevent blisters, cuts, burns, and bruises.
- A two wheeler riding suit or jacket for comfort as well as protection. Bright coloured reflective clothing can help make you more noticeable in traffic. Be sure to avoid loose clothes that could get caught on any part of your vehicle.

## OFF-ROAD SAFETY

This vehicle allows you to enjoy all the excitement of riding it off-road. For this, it is necessary to follow some recommendations, which will tie off-road excitement with safety.

### Protective equipment

Essential for your safety. Make a rule of always wearing them.

- **Helmet**- essential equipment.
- **Goggles**- the greater the visibility, the better.  
Choose goggles that do not break or splinter.
- **Long**- sleeved shirts having fillings in the elbows and shoulders to protect against eventual injuries in the arms.
- **Gloves**- models with padded hand backs are the most indicated for off-road riding. Choose gloves that fit your hands.
- **Adbominal band**- it protects internal organs against off-road bumps.
- Nylon trousers with protection in the knees or reinforced jeans. They increase protection. Choose the right size for your proper freedom of motion.
- **Boots**- they should be made of reinforced leather with thick grooved soles and steel tips. They should also be flexible and fit you properly.
- **Waist bag**- it is important so you may carry spare parts and those parts that were removed from the vehicle.

## Preparing the vehicle

For off-road practice, it is essential that your vehicle is in perfect mechanical condition. The front brake lever, clutch lever and turn signal brackets should be loosened in order to rotate in case of falling down, preventing breakage. They should be loosened to turn on the handlebars only with a slight force. Under most adverse conditions, the rear view mirrors and turn signals should be removed.

## LOAD LIMITS AND GUIDELINES

Your vehicle has been designed to carry you, one pillion and limited amount of cargo. When you add cargo or carry a passenger, you may feel some difference during acceleration and braking. But so long as you keep your vehicle well maintained, with good tyres and brakes, you can safely carry loads within the limits and guidelines.

However exceeding the weight limit or carrying an unbalanced load can seriously affect your vehicle's handling, braking and stability. Non Hero MotoCorp accessories, modifications, and poor maintenance can reduce your safety margin.

### Loading

How much weight you put on your vehicle, and how you load it, are important to your safety. Anytime you ride with a pillion or cargo you should be aware of the following information.

**! WARNING**

- **Overloading or improper loading can cause a crash and you can be seriously injured.**
- **Follow all load limits and other loading guidelines in this manual.**

### Load limits and weight distribution

This vehicle is designed to carry the rider (1) and one pillion (2). The overall weight should be distributed in four points (A, B, C, and D) and should never exceed the maximum load capacity of **130 kg**. This will assure higher stability, better drivability and more comfort.

**(1)+(2)= 130 kg {where, 1=A+B & 2=C+D}**



**(A) Rider seat**

**(B) Rider footrest**

**(C) Pillion seat**

**(D) Pillion footrest**

Damages caused by excessive load will not be covered under Hero MotoCorp warranty policy. If you are not sure about how to calculate the load weight that can be accommodated to your vehicle without causing overload and structural damages, see your Authorised Distributor/Dealer.

### Loading guidelines

Your vehicle is primarily intended for transporting you and a pillion. If you wish to carry cargo, check with your Authorised Distributor/Dealer for advice and be sure to read the information regarding accessories on **(page 13)**.

Improperly loading your vehicle can affect its stability and handling. Even if your vehicle is properly loaded, you should ride at reduced speeds whenever carrying cargo.

Follow these guidelines whenever you carry a pillion or cargo:

- Keep cargo and accessory weight low and close to the center of the vehicle. Load weight equally on both sides to minimize imbalance. As weight is located further from the vehicle's center of gravity, handling is proportionally affected.
- Adjust tyre pressure **(page 64)** to suit load weight and riding conditions.
- Vehicle handling and stability can be adversely affected by loose cargo. Recheck cargo security and accessory mounts frequently.
- Do not attach large or heavy items to the handlebars, front fork or fender. Unstable handling or slow steering response may result.



## ACCESSORIES & MODIFICATIONS

Modifying your vehicle or using non-Hero MotoCorp accessories can make your vehicle unsafe. Before you consider making any modifications or adding an accessory, be sure to read the following information.

### WARNING

- ***Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.***
- ***Follow all instructions in this owner's manual regarding accessories and modifications.***

### Accessories

- Make sure that the accessory does not obscure any lamps, reduce ground clearance, limit suspension travel or steering travel, affect your riding position or interfere with operating any controls.
- Be sure electrical equipment does not exceed the vehicle's electrical system capacity (**page 8**). A blown fuse can cause a loss of lights.
- Do not pull a trailer or sidecar with your vehicle. This vehicle was not designed for these attachments, and their use can seriously impair your vehicle's handling.

### Modifications

We strongly advise you not to remove any original equipment or modify your vehicle in any way that would change its design or

operation. Such changes could seriously impair your vehicle's handling, stability and braking, making it unsafe to ride. Removing or modifying your lamps, mufflers, emission control system or other equipment can also make your vehicle illegal.

### ANTI-THEFT TIPS

- Always lock the steering and never leave the key in the ignition switch. This sounds simple but people do forgets.
- Be sure the registration information for your vehicle is accurate and correct.
- Park your vehicle in a locked garage whenever possible.
- Use an additional anti-theft device of good quality.
- Never park your vehicle in an isolated area. Park as far as possible in a designated area.
- Enter your name, address and phone number in this Owner's Manual and keep it in your vehicle at all times. Many times stolen vehicles are identified by information in the Owner's Manuals that are still with them.

**NAME:** \_\_\_\_\_

**ADDRESS:** \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

**PHONE NO :** \_\_\_\_\_

## SAFE RIDING TIPS



### Do's:

- Always conduct simple pre-ride inspection (**page 35**).
- Always wear a helmet with chinstrap securely fastened and insist on a helmet for your pillion rider. Helmet should conform as per safety standards applicable in your country.
- While riding, sit in a comfortable position with your legs close to fuel tank.
- Ride defensively and at a steady speed (between 40–50 km/hr).
- For stopping vehicle, use both brakes simultaneously, keeping throttle in the close position.
- During night time, dip headlamps of your vehicle for oncoming traffic, or when following another vehicle.
- Give way to others on the road and signal before you make a turn.
- To make yourself more visible, wear bright reflective clothing that fits well.
- Take care of loose/hanging clothes while solo/pillion riding.
- Get your vehicle serviced regularly by the Authorised Distributor/Dealer.
- Before riding make sure that engine stop switch is in “ON” (O) position.
- Keep checking the ABS indicator. At any point if indicator remains on, then ABS is not working (**page 30**).
- Keep checking speedometer. In case of ABS malfunction, speed display may go to zero.
- It is suggested to go through the do's & don't's of ABS (**page 38**) and practice your ABS vehicle initially in low-traffic condition unless you are thoroughly familiar with your vehicle and its controls.

### Don'ts



- Never use cell phone while riding the vehicle.
- Avoid sudden acceleration, braking and turning of your vehicle.
- Never shift gears without disengaging the clutch and closing the throttle.
- Never touch any part of the hot exhaust system like muffler.
- Never ride under the influence of alcohol or drugs.
- Concentrate on the road and avoid talking to the pillion rider or others on the road.
- Do not litter the road.
- Do not cross the continuous white/yellow line in the center of the road, while overtaking.
- Do not attach large or heavy items to the handlebars, front forks, or fenders.
- Never take your hands off the steering handle while riding.
- Do not attempt to apply the front brake lever intermittently for ABS vehicle.
- Do not panic by mechanical noises or slight pedal pulses while applying the brake in vehicle. These conditions are normal and indicates that ABS is working.
- Do not apply the hard braking in wet or rainy conditions.
- Do not switch off the engine stop switch while riding the vehicle (**page 30**).
- Navigation system assists you to reach your destination, don't be distracted while driving. Drive safely and always obey traffic rules.

## TIPS FOR HEALTHY ENVIRONMENT

The following tips shall ensure a healthy vehicle, healthy environment, and a healthy you.

- **Healthy engine:** The engine is the lifeline of every vehicle. To keep it healthy, it should be tuned regularly, which will also help reduce pollution and improve vehicle performance & fuel efficiency.
- **Regular servicing:** Get your vehicle serviced at an Authorised Distributor/Dealer, as per the service schedule, for an optimum performance and keep the emission level under check.
- **Genuine spares:** Always insist on Hero MotoCorp genuine parts as spurious or incompatible spares and accessories can upset or deteriorate your vehicle's running condition.
- **Genuine engine oil:** Hero 4T Plus SAE 10W 30 SL grade (JASO MA2) engine oil recommended by Hero MotoCorp and make sure you change it every **6000** km. (with top up every **3000** kilometres) to keep the engine fit and environment healthy.
- **Noise pollution:** Noise beyond a certain decibel is pollution. Whether it is from horns or defective mufflers, excessive noise will cause headaches and discomfort.
- **Fuel saving & reduce pollution:** Switch "OFF" the engine while waiting at traffic signal points to save fuel and reduce pollution, if the waiting period is long.

## PARTS FUNCTION IGNITION SWITCH

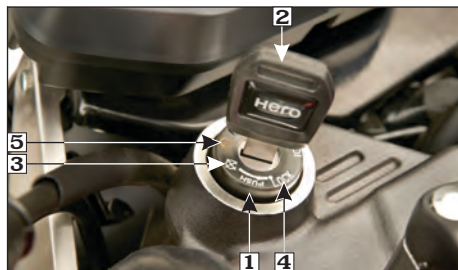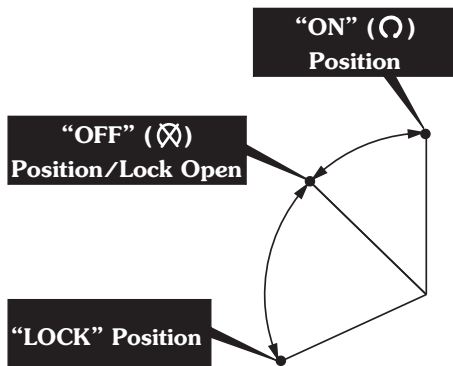


1. Ignition switch
2. Ignition key
3. “OFF” (⊘) position
4. Steering lock position
5. “ON” (⊙) position

Key Position	Function	Key Removal
“ON” (⊙)	The LCD panel illuminates & initial display of multi function digital segments are displayed. The tachometer segment and the fuel gauge segment will swing to the maximum scale once and back to its normal position. The engine can be started. Turn signal lamp, horn, tail/stop lamp, fuel gauge, pass lamp, position lamp & neutral indicator will be functional.	Key cannot be removed.
“OFF” (⊘)	Engine cannot be started and no electrical system will be functional.	Key can be removed.
“LOCK”	Steering can be locked.	Key can be removed.

## INSTRUMENTS AND INDICATORS

The indicators are in the speedometer panel above the headlamp. The functions are as below.

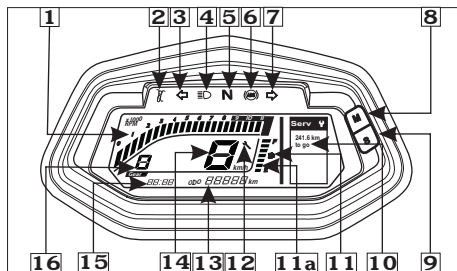

Sl. No.	Description	Function
1	Tachometer	Shows engine revolution per minute. The tachometer digital segments will swing to maximum scale on the meter console once the ignition switch is turned "ON".
2	Side stand indicator	Light glows when the vehicle is parked on the side stand.
3	Turn signal indicator(L)	Flashes when left turn signal switch is operated.
4	High beam indicator	Light glows when headlamp is in high beam.
5	Neutral indicator	Light glows when vehicle is in neutral.
6	Anti-lock braking system (ABS) indicator	This indicator normally comes on for approx 1.8 seconds when the ignition switch is turned "ON" (⊙) & then keeps blinking until the vehicle attains speed of 5 km/h. If there is a problem with the anti-lock brake system, ABS indicator turns on ( <b>page 30</b> ).
7	Turn signal indicator(R)	Flashes when right turn signal switch is operated.
8	Mode button	Switches display between odometer, tripmeter-1 & 2, clock, Eco mode & Bluetooth connectivity.


Sl. No.	Description	Function
9	Set button	To adjust clock, date & tripmeter. When long pressed resets tripmeter to zero.
10	Next service distance	Indicates how many kilometers are left before the next service is due. It appears for few seconds when the ignition switch is turned "ON" (ⓘ) <b>(page 22)</b> .
11	Fuel gauge	Indicates approximate fuel available in the form of digital segments. The digital segments (11a) will swing to maximum scale on the meter console once the ignition switch is turned "ON" (ⓘ). If all the segments (11a) are displayed it means fuel quantity in the fuel tank is <b>13.0</b> litres. If only one segment is displayed and blinks, this indicates the fuel quantity is low and the fuel tank should be refilled as soon as possible.
12	Service reminder indicator	Displays when the next service is due <b>(page 22)</b> .
13	Odometer	Shows accumulated distance travelled <b>(page 20)</b> .
14	Speedometer	Indicates riding speed.
15	Digital clock	Indicates hours & minutes <b>(page 19)</b> .
16	Gear indicator	Displays the selected gear while riding <b>(page 23)</b> .

## LCD PANEL

### (a) Digital clock


Digital clock (1) shows hour and minute. To adjust the time, proceed as follows :

- Turn the ignition switch "ON" (⊙).
- Press and hold set button (2) and mode button (3) simultaneously for more than 2 seconds. The clock will be set in the adjust mode with the hour's digit display blinking.

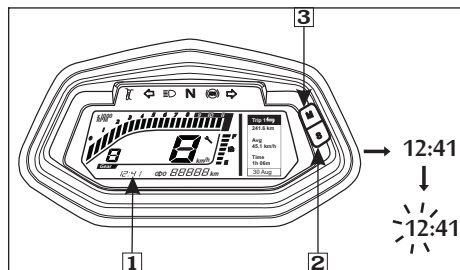


(1) Digital clock (2) Set button  
(3) Mode button

- To set the hour, press set button (2) until the desired hour is displayed.
  - The time is advanced by 1 hour each time the button is pressed.
  - The time advances fast when the button is pressed and held.

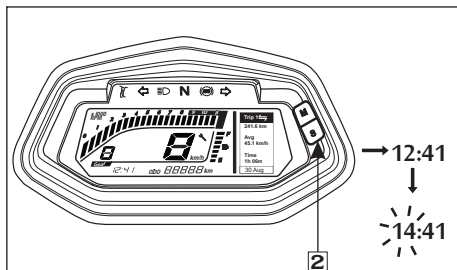

(2) Set button


- Press the mode button (3). The minutes display starts blinking.

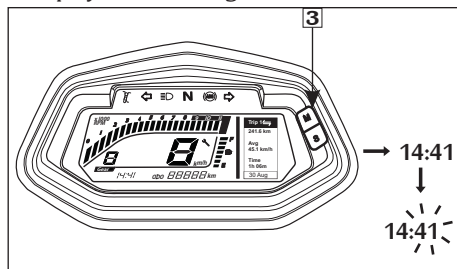

(3) Mode button

- To set the minute press set button (2) until the desired minute is displayed. The minute display will return to "00" after "60" is reached without affecting the hour display.
  - The time advances by 1 minute, each time the button is pressed.

- The time advances fast when the button is pressed and held.

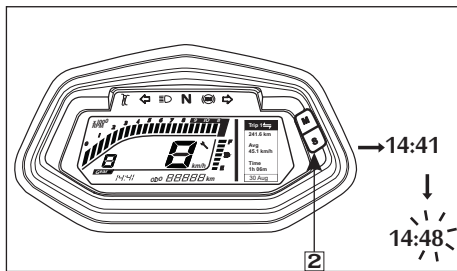

**(2) Set button**

- To end the adjustment press the mode button (2) until clock display stops blinking.



**NOTE**

*The clock will reset to "1:00" if the battery is disconnected.*

**(b) Odometer/Tripmeter**

The odometer (1) shows accumulated distance travelled.

The tripmeter shows distance travelled since trip meter was reset last time. There are two tripmeters, "Trip-1" and "Trip-2".


Push the mode button (3) to select "Trip-1" and "Trip-2". "Trip-1" and "Trip-2" can be displayed upto "999.9" km.

If the tripmeter exceeds "999.9" km it will return to "0.0" km automatically.

Trip meter displays following parameters:

- **Distance:** distance covered in a trip.
- **Avg speed:** average speed at which vehicle completes a trip
- **Trip time:** time taken to complete a trip.
- **Date:** it shows the current date.

When tripmeter is selected, long press (more than 2 seconds) the set button to reset tripmeter to zero. The odometer can be displayed from "0 to 99999" km.

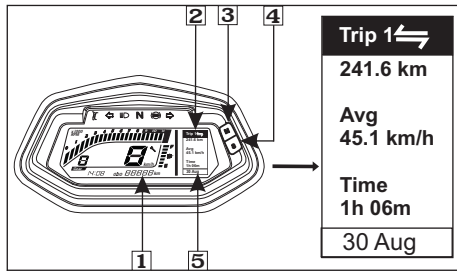


- (1) Odometer**
- (2) Tripmeter**
- (3) Mode button**
- (4) Set button**
- (5) Date**

To update the date proceed as follows :


- Turn the ignition switch "ON" (⊙).
- Press and hold set button (4) and mode button (3) simultaneously for more than 2 seconds. The clock display will start blinking (**page 19**).
- Keep pressing and releasing mode button (3) until date display (5) starts blinking.



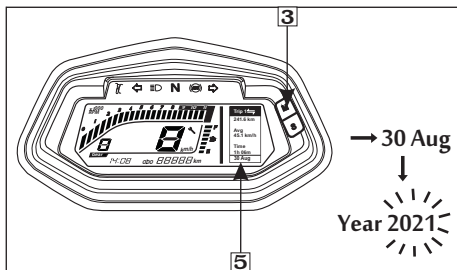

**(3) Mode button** **(5) Date display**


- Now to set year, press set button (4) until the desired year is displayed.

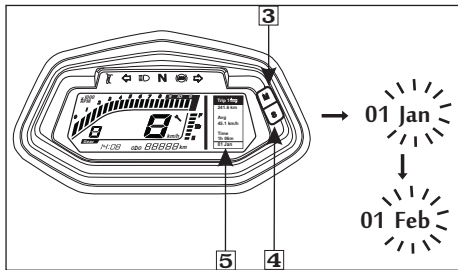

**(3) Mode button** **(4) Set button**


**(5) Date display**

- To set day, press the mode button (3) to switch from month to day display. Now press the set button (4) until the desired day is displayed.

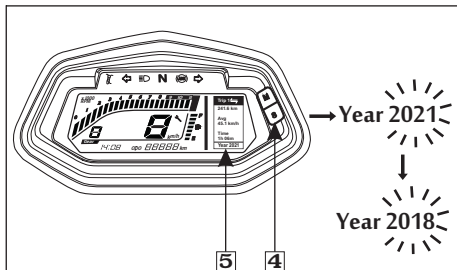

**(4) Set button** **(5) Date display**

- To set month, press the mode button (3) to switch from year to month display. Now press the set button (4) until the desired month is displayed.

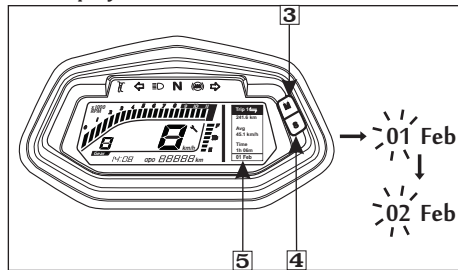

**(3) Mode button** **(4) Set button**


**(5) Date display**


- To end the adjustment press the mode button until date display stops blinking.

### (c) Service reminder indicator

The service reminder indicator (1) is to indicate the user to bring the vehicle to an Authorised Distributor/Dealer for service. The indicator shall start blinking when the vehicle covers kilometers as specified in the maintenance schedule. The indicator will keep on blinking throughout the kilometer interval for a particular service and will stay “ON” thereafter.

Meter console also displays the next service distance (2). It indicates how many kilometers are left before the next service is due. It appears for few seconds when the ignition switch is turned “ON” (O).

The service reminder indicator “” can only be reset at an Authorised Distributor/Dealer.

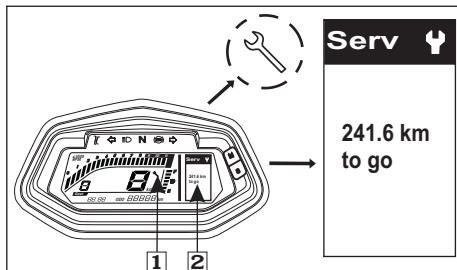

- (1) Service reminder indicator
- (2) Next service distance.

### NOTE


*After getting the vehicle serviced, make sure that the Service Reminder Indicator has been reset.*

### FEATURES

#### (a) ECO mode

ECO mode assists the rider to achieve optimum fuel efficiency.

Press the mode button (1) until ECO mode (2) is displayed.

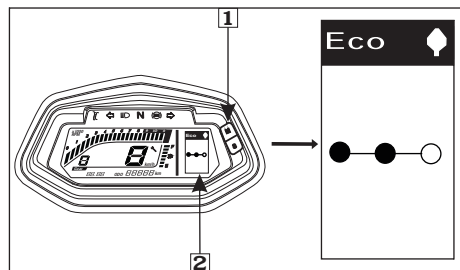


(1) Mode button

(2) Eco mode


It displays following riding instructions :

- Shift up indicator: it recommends for shifting to high gear.

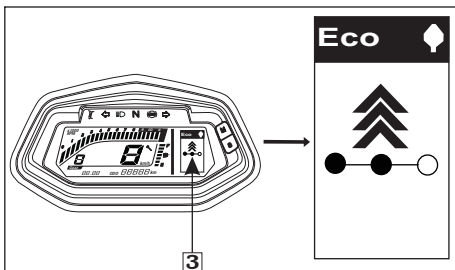

### (3) Shift up indicator

- Shift down indicator: it recommends for shifting to low gear.

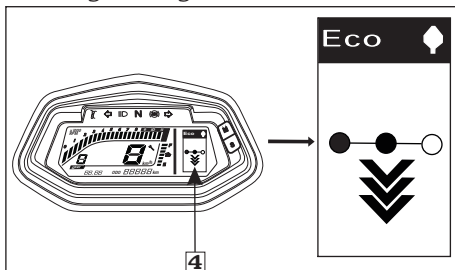

### (4) Shift down indicator




#### NOTE

**ECO mode assists the rider to achieve optimum fuel efficiency based on your vehicle's engine performance.**

**It is recommended to ride your vehicle as per road and traffic conditions.**

### (b) Gear indicator

Gear indicator (1) indicates current gear condition of your vehicle in which it is running.

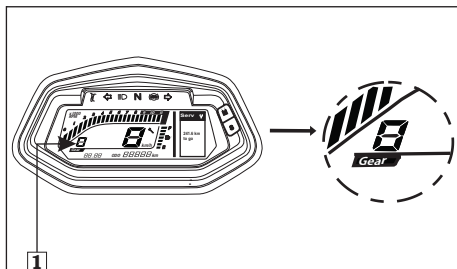

### (1) Gear indicator



#### NOTE

- Gear indicator displays "0" when your vehicle is in neutral.
- Gear indicator displays "-" when it delays in displaying the gear indication or when you change gears in vehicle static condition (vehicle is in main stand and ignition switch is in "ON" position).

### (c) Hero ride guide/Navigation Application:

Hero navigation application (1) is available in the google play store (for androids) or App Store (for iOS), which can be installed in your device to access bluetooth, incoming calls alerts, mobile low battery alert, and navigation features.



## NOTE

- **Compatibility and performance of hero ride guide application may very based on your device and software version.**
- **Application needs GPS signal, internet and bluetooth connectivity to perform the desired navigation functionality.**

### Bluetooth:

Your vehicle is equipped with bluetooth connectivity feature by which you can pair your smartphone with the meter console of your **XPULSE 200** vehicle through Hero navigation application.

To connect your device proceed as follows:


- Turn the ignition switch “ON”.
- Open hero navigation application (1) on your smartphone.



### (1) Hero navigation application

- For first time pairing, allow the application to access:

- Device's location if GPS is not enabled in your device
- Photos, media, files
- Contacts
- Make & manage phone calls
- Phone call logs on your device

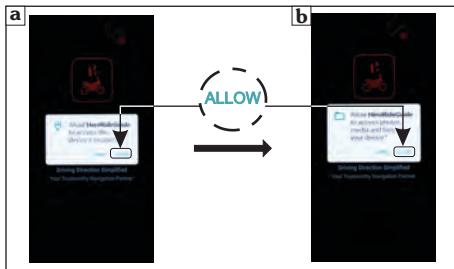


- Now select “GET STARTED” (2) to proceed.
- Application also asks you to accept (3) the terms and conditions to proceed.



**(2) Get started**

**(3) Accept terms and condition**


- Now login your app using facebook or google (4) account and get started.
- Allow (5) the application to turn on bluetooth if it is not enabled in your device.

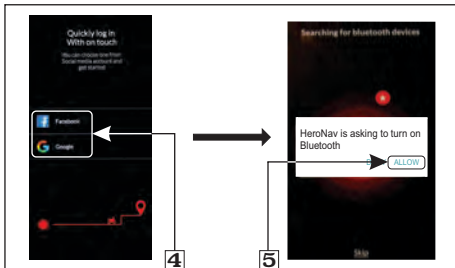

**(4) Log in through Facebook or Google**


**(5) Turn on bluetooth**

- The application searches for a while and displays all nearby devices. Select the device with your name (6).

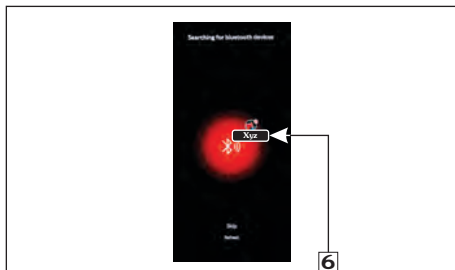

**(6) Select your device**

- Update your name (7) (if required) and select either save and connect (8) or connect (9) to proceed.

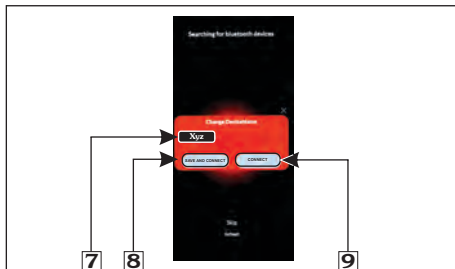


**(7) Select your device**

**(8) Save and connect**

**(9) Connect**


- On pairing, meter console displays “connected” (10) below bluetooth symbol in bluetooth mode (11).

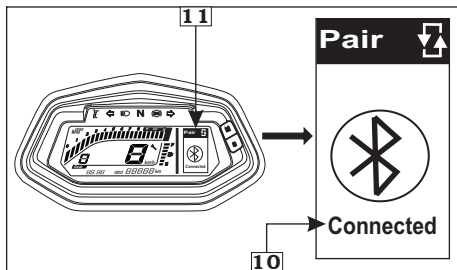

(10) Bluetooth connected

(11) Bluetooth mode

- If any error occurs during the course of pairing process, then meter console will display “Not found” (12) below bluetooth symbol. Repeat the above steps and keep your smartphone closer to the vehicle to reconnect.

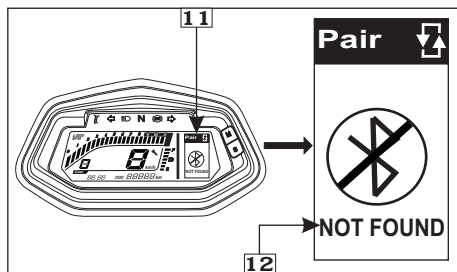


(11) Bluetooth mode

(12) Not found

### Navigation:

To use navigation feature proceed as follows:


- Connect your vehicle with your hero ride guide/navigation application via bluetooth (page 24).
- After successful connection, the application and meter console display will automatically switch to navigation mode (4). It will also update your current location (1) through GPS system.
- Now choose your destination (2) through the application and select “start ride” (3).

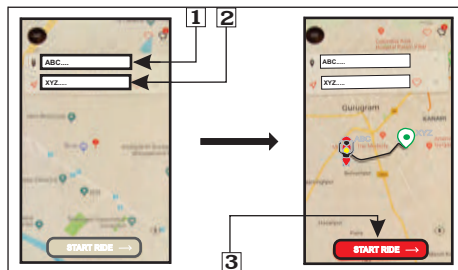

(1) Current location (2) Choose destination

(3) Start ride

- After processing for a while, meter console will display the direction (5), distance for next move (7) and estimated time of arrival (ETA) (6). Estimated time of arrival will be displayed in “am” or “pm”. Hero navigation app and meter console of your vehicle will display step by step navigation guidance/direction through navigation signs (page 74).

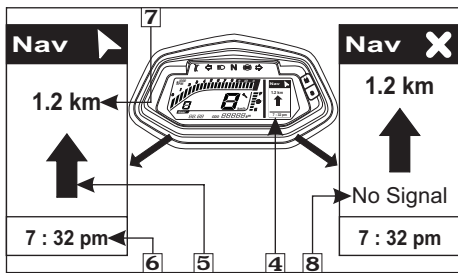

(4) Navigation mode (5) Direction (6) ETA  
(7) Distance for next move (8) No signal

### NOTE

At any point, if Navigation system loses signal, then it displays "No Signal" (8) on meter console when vehicle is in navigation mode.

### WARNING

Navigation system assists you to reach your destination, don't be distracted while driving. Drive safely and always obey traffic rules.

### Autopairing:


Your vehicle is equipped with autopairing feature by which if you turn "OFF" vehicle's ignition switch after successful pairing with hero navigation application, it will reconnect automatically once ignition switch is turned "ON".

### NOTE

Always keep your smartphone close to your vehicle during the course of pairing, autopairing and navigation.

### Incoming call alert:

If your smartphone is paired with the meterconsole of your vehicle via bluetooth (page 24), then you will get all the incoming calls alerts on the meter console. It will display the name of the caller if it is stored in your compatible smartphone. For example: If caller's number is stored in your compatible smartphone by name of Vijay, then your meter console will display Vijay calling (1).

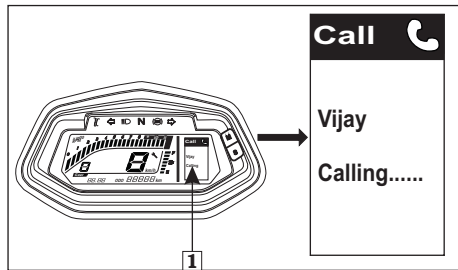

(1) Incoming call alert by name

If the number is not saved in your device by name or your device is an iOS, then it will display "unknown calling" (2).







## HANDLEBAR SWITCHES CONTROL

### Left handlebar controls

#### 1. Headlamp dimmer switch/Pass switch

The headlamp operates only when the engine is running.


Press the switch (1) upwards for high beam “” downwards for low beam “”.

Press the pass switch to “PASS” position to operate the pass lamp.

#### 2. Turn signal lamp switch (◀ ▶)

Shift the turn signal switch (2) sideways for right/left indications and leave it to come back to its normal position on its own.

**IMPORTANT:** To switch “OFF” the turn signal after completing the turn, gently push the switch inside.

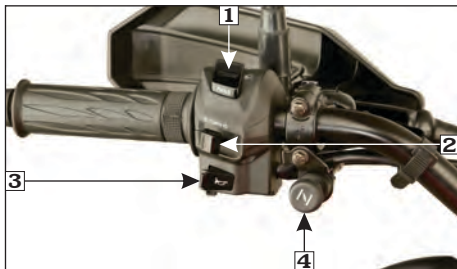

- (1) Headlamp dimmer switch/Pass switch  
(2) Turn signal switch      (3) Horn switch  
(4) Bystarter knob

#### 3. Horn switch (📢)

Press the switch to operate the horn (3).

#### 4. Bystarter knob (↖)

To apply bystarter, pull the knob (4) towards the rider.



### NOTE

*Do not accelerate during starting when the bystarter is on.*

#### 5. Clutch switch

There is a clutch switch (5) provided for the safety of the rider. The vehicle cannot be started by electric starter switch until the clutch lever is operated when the vehicle is engaged in gear.



(5) Clutch switch

## Right handlebar controls

### 1. Electric starter switch (Ⓢ)

Ensure starter switch (1) is operated when the vehicle transmission is in neutral. If the vehicle is engaged in gear, press the clutch lever before operating the starter switch. Release starter switch after the engine has started.



(1) Electric starter switch

#### ! CAUTION

**Never hold electric starter switch continuously more than 5 seconds as continuous cranking of engine will discharge the battery.**

### 2. Engine stop switch

The engine stop switch (2) is provided next to throttle grip. The switch has two positions. In “ON” (Ⓞ) position, engine will operate and in “OFF” (⊗) position, engine will not operate. The prime function of switch is to stop the engine during emergency (Vehicle tip over, throttle cable stuck etc.). The switch should normally remain in “ON” (Ⓞ) position. During

emergency, put the switch to “OFF” (⊗) position.



(2) Engine stop switch

#### ! WARNING


**While riding the vehicle in normal condition, do not switch off the “Engine stop switch” to avoid any damage (Wheel locking leading to accident, part damage, battery discharge etc.).**

### ABS INDICATOR


The ABS indicator (1) on speedometer come “ON” for approx 1.8 seconds when the ignition switch is turned “ON” (Ⓞ) & then keeps blinking until the vehicle attains a speed of 5 km/h.

When the system functions normally indicator goes “OFF” (Ⓢ) once vehicle speed exceeds 5 km/h.

At any point if ABS indicator remains “ON” then ABS is not working, but the brakes still work normally. Reduce your vehicle speed and visit your Authorised Distributor/Dealer.

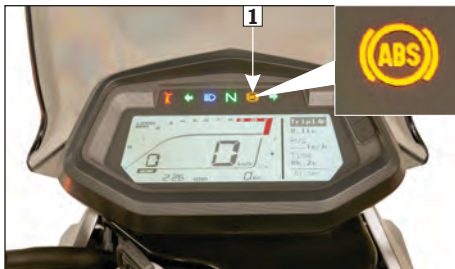


(1) ABS indicator

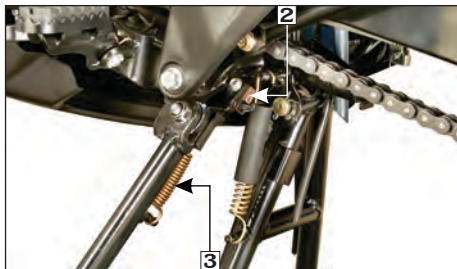

(2) Side stand switch (3) Side stand spring

### SIDE STAND INDICATOR/SWITCH

For the safety of the customer a side stand indicator (1) is provided.

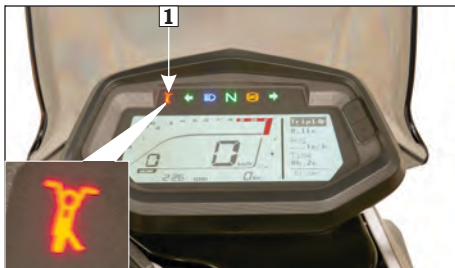

(1) Side stand indicator

- Check the side stand for proper function and the spring (3) for damage or loss of tension and the side stand assembly for free movement.
- Check whether the side stand indicator (1) glows when the side stand is down.
- While the vehicle is removed from side stand, the side stand indicator (1) should not glow.
- If the side stand indicator (1) does not operate as described in above steps, please visit your Authorised Distributor/Dealer.

### ! CAUTION

*Ensure that adequate care should be taken while cleaning the side stand switch.*

A side stand switch (2) is provided in the side stand, when the side stand is down (Ignition Switch “ON” (O)), the switch enables the side stand indicator lamp to glow on the speedometer panel.

### FUEL TANK

Fuel tank capacity is 13.0 litres including usable reserve supply of 2.0 litres (Usable).

- To unlock fuel tank cap, lift the key hole cover (1), insert key (2) turn it clockwise and lift open the cap (3).
- Remove the key and put back the keyhole cover.




(1) Key hole cover

(2) Ignition key



(3) Fuel tank cap

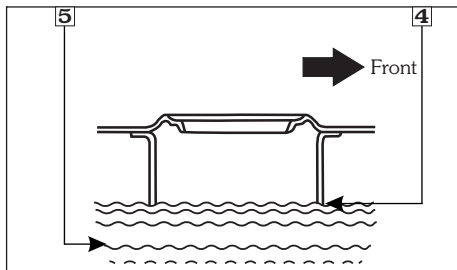

(4) Filler neck

(5) Fuel

### ! CAUTION

*Do not park the vehicle under direct sunlight as it causes evaporation of petrol due to heat and deterioration of paint gloss due to ultra violet rays.*

### ! WARNING

*Petrol is extremely flammable and is explosive under certain conditions. Refill in a well ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area where the vehicle is refilled or where petrol is stored.*

- Do not overfill the tank. There should be no fuel in filler neck (4). Fill the tank with fuel (5) as shown.
- To lock fuel tank cap, close the cap back on the opening and press gently. The key springs back to the normal position and cap gets locked.

### FUEL VALVE

The three way fuel valve is on the left side of the carburetor.

### “OFF” (O) position

At “OFF” position (1), fuel cannot flow from the tank to the carburetor. Turn the valve

“OFF” whenever the vehicle is not in use.



(1) “OFF” (O) position

### “ON” (☐) position

At “ON” position (2), fuel will flow from the tank to the carburetor.




(2) “ON” (☐) position

### “RES” (⌋) position

At “RES” position (3), fuel will flow from the reserve fuel supply to the carburetor.

Use the reserve fuel only when the main supply is exhausted. Refill the tank as soon as possible after switching to “RES”. The reserve fuel supply is 2.0 litres (usable reserve).

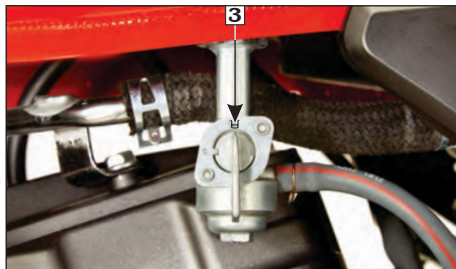

(3) “RES” (⌋) position

### NOTE

- Do not operate the vehicle with the fuel valve in the “RES” (⌋) position after refilling. You may run out of fuel, with no reserve.
- Do not keep the fuel valve between “ON” (☐) and “OFF” (O) position while driving, since this may drain reserve fuel from the tank.

### SEAT LOCK

**Location:** On the left side of the rear cowl, below the rear grip.


**Operation:** Insert the ignition key (1) and turn is clock wise to unlock the seat. To install, engage the hook on the underside of the seat with the frame and slide the seat to the front until the lock clicks.



**(1) Seat lock**

## USB CHARGER

A USB charger (1) with a cap (2) located inside the USB device compartment (3) is provided in your vehicle under the seat to charge your mobile phone safely while riding.

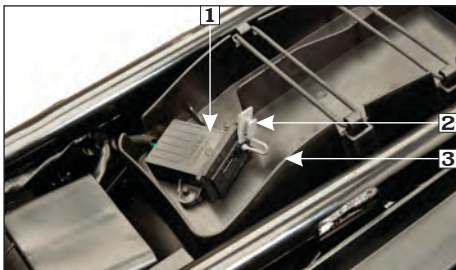

**(1) USB charger**

**(2) Cap**

**(3) USB device compartment**

To connect a mobile phone charger, first remove the cap from the USB charger and then plug in the charger cable to it.

Use of non-standard USB cable may cause damage to the mobile phones.

Hero MotoCorp will not be responsible for damages caused due to use of non standard USB cable.

## **!** CAUTION

- *Always place the device in a soft clean cloth/towel to avoid any damage due to road shocks while riding.*
- *This port is for charging compatible USB devices.*
- *Multiple charging of USB devices have to be avoided, simultaneous charging may lead to slow or no charging.*
- *Do not leave the USB device and USB cable in the USB device compartment when the vehicle is parked.*
- *Charge your device only when the engine is operational/while riding. Charging the USB device when the engine is "OFF" would lead to early discharge of battery.*

## NOTE

- *Do not apply any soap solution, oil or grease inside the USB charger.*
- *Any personal belongings have to be removed before water washing to avoid damage.*
- *Always keep the USB port cap closed after use to prevent dust or water entry during rains/water wash.*
- *Do not direct water jet towards the port even with cap closed to avoid any short circuit. Always dry the area using a dry cloth or moisture free compressed air before use.*

## PRE- RIDE INSPECTION

You should conduct pre ride inspection before riding the vehicle to enhance riding comfort and safety.

Clean your vehicle regularly. It protects the surface finish. Avoid cleaning with products that are not specifically designed for vehicle surfaces.

Inspect your vehicle every day before you start the engine. The items listed here will only take a few minutes, and in the long run they can save time, expense, and possibly your life. Please follow the tips as given below:

- **Engine oil level**—Check and top up engine oil if required (**page 46**). Check for leaks.
- **Fuel level**—Ensure sufficient fuel is available in the fuel tank for your journey (**page 31**). Check for leaks.
- **Front brake**—Check for correct brake fluid level in master cylinder/reservoir (**page 58**).
- **ABS indicator**—Check ABS indicator for proper functioning of ABS (**page 30**).
- **Rear brake**—Check for correct brake fluid level in the reservoir (**page 59**).
- **Tyres**—Check condition and pressure (**page 64**).
- **Clutch**—Check for smooth operation. Adjust free play if necessary (**page 52**).
- **Drive chain**—Check condition and slackness (**page 54**). Lubricate if necessary.
- **Throttle**—Check for smooth opening and closing in all steering positions (**page 53**).
- **Lamps & Horn**—Check that headlamp, position lamps, tail/stop lamp, turn signal lamps, indicators and horn function properly.
- **Rear view mirror**—Ensure that the rear view mirror gives a good rear view when you are sitting on the vehicle.
- **Engine stop switch**—Check for proper function (**page 30**).
- **Air suction valve**—Make sure all tube connections are secured properly (**page 70**).
- **Fitting & Fasteners**—Check & tighten if necessary.
- **Steering**—Check for smooth action and for easy maneuverability.
- **Side stand indicator**—Make sure that the side stand is up. If it is in down position the side stand indicator (**page 31**) will glow on the speedometer panel.



## STARTING THE ENGINE



1 Turn the ignition switch "ON" (Ⓞ).



2 Turn the fuel valve "ON" (Ⓞ).



3 Select neutral position & check (N) indicator glows on instrument cluster with ignition "ON" (Ⓞ).



4 Make sure that the engine stop switch is at "ON" (Ⓞ) position.



5 Pull the bystarter knob outwards to "ON" position as indicated (Use bystarter during cold conditions).



6 Press the starter switch to start the vehicle. (Alternatively, kick start pedal can be used for starting).



7 Push the bystarter knob inwards to "OFF" position as indicated, after the engine gets sufficiently warmed up to have a stable throttle response.

### ⚠ WARNING

*Never run the engine in a closed area, the exhaust contains poisonous gases.*

### 📖 NOTE

- **To start the engine in any gear position using the electric starter, press the clutch lever and push the starter switch.**
- **Kick starting will not be possible when the transmission gears are engaged unless you press clutch lever. Press the clutch lever or shift the transmission to neutral before kick starting.**
- **Never attempt to kick start while vehicle is moving forward or backward. This may lead to damage to the product and is not safe as well.**



## Flooded engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine, turn the ignition switch “OFF” (⊗) and push the bystarter knob to “OFF”. Close the throttle fully and crank the engine several times with the kick starter. Turn the ignition switch “ON” (⊙) and start the engine without using bystarter.


## Running in

Help assure your vehicle’s future reliability and performance by paying extra attention to how you ride during the first 500 km.

During this period, avoid full-throttle starts and rapid acceleration.

## RIDING

- After the engine has been warmed up, the vehicle is ready for riding.
- While the engine is idling, press the clutch lever and depress the gearshift pedal downwards using the toe to shift into 1<sup>st</sup> gear.
- Slowly release the clutch lever and at the same time, gradually increase engine speed by opening the throttle. Coordination of the throttle and clutch lever will assure a smooth positive start.
- When the vehicle attains a moderate speed, close the throttle, press the clutch lever and shift to 2<sup>nd</sup> gear by placing the toe on the underside of gear pedal and lift upwards.
- This sequence is repeated progressively to shift to 3<sup>rd</sup>, 4<sup>th</sup> and 5<sup>th</sup> gear.

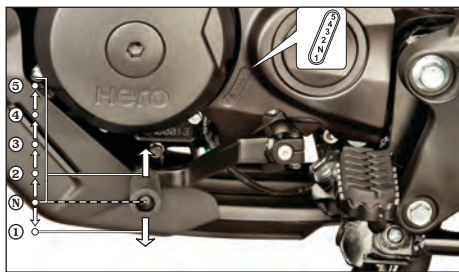

## ! CAUTION

*Do not shift gears without operation of clutch and without closing the throttle otherwise this would lead to damage of gears.*

## BRAKING

### Anti-lock braking system (ABS)

This model is equipped with Anti-lock braking system (ABS). ABS enhances active safety by helping to prevent the wheels from locking under braking.


ABS is designed to meet two essential requirements during every brake application:

- To help provide vehicle stability.
- To help maintain steering control and maneuverability—on road surfaces.

**The ABS system is self-regulating and always active once vehicle speed exceeds 5 km/h.**

- The ABS computer acts on the basis of the comparative speeds of the front wheel. The use of non-approved tyres can affect the speed of the wheels and supply incorrect information to the ABS computer.

The system has a wheel speed sensor (1), hydraulic electronic control unit (HECU) (2), and an ABS indicator lamp (3) on meter console.

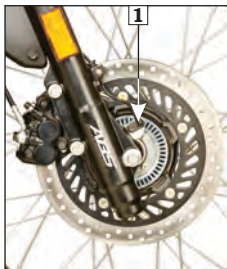


(1) Wheel speed sensor

(2) Hydraulic electronic control unit (HECU)

Whenever you ride your vehicle, **Wheel speed sensor** monitors the speed of the wheel and sends the input to **Hydraulic Electronic control unit (HECU)**. Then **HECU** monitors your bike and takes control when vehicle speed exceeds 5 km/h.

Now whenever you will apply front brake, ABS will come into picture and based on the input from wheel speed sensor, HECU will modulate the pressure at front caliper thus avoiding wheel to lock and in turn resulting safe stop of the vehicle.

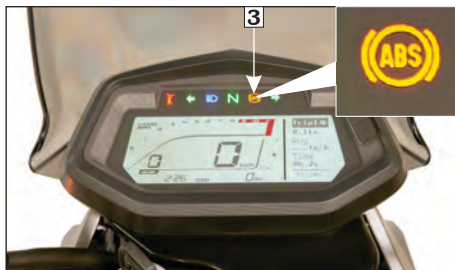

(3) ABS indicator

## Do's and Dont's

### Do's

- Check your brake pads and be sure you have clean brake fluid. ABS systems can also fail due to worn brake pads or air or dirt in brake fluid.
- Use the recommended brake fluid.
- If brake gets wet, apply the brake while riding at low speed to help them dry.
- ABS should be serviced only at Authorised Distributor/Dealer.
- Read your owner's manual for additional riding instructions.
- Carefully remove the wheel during the puncture/tyre replacement to prevent the Sensing ring damage/bend.
- Use only the recommended make, type and size of tyre (**page 64**).
- Keep checking speedometer. In case of ABS malfunction, speed display may go to zero.

## Don't's

- Don't panic by mechanical noises or slight pedal pulses while applying the brake in vehicle. These conditions are normal and indicates that ABS is working.
- Don't apply the hard braking in wet or rainy conditions and while taking a turn.
- Do not adjust the wheel speed sensor air gap yourself.
- Do not attempt to correct the encoder teeth by bending manually or by using any other mode.
- Do not insert any metallic part near wheel speed sensor.
- Don't try to service HECU or open to separate the parts.
- Don't use the non-genuine spares like pads, discs, tyres etc.

## PARKING

After stopping the vehicle, shift the transmission to neutral, turn the fuel valve "OFF" (O), turn the ignition switch "OFF" (OFF), park the vehicle on main stand, lock the steering and remove the key.

### **!** CAUTION

- *Park the vehicle on firm level ground to prevent overturning.*
- *While parking on side stand engage the first gear.*

## TOOL KIT

The tool kit (1) is located under the seat. Some emergency repairs, minor adjustment and parts replacement can be performed with the tools contained in the kit.

Kit consists of following tool:

- Tool bag
- Driver No.2 + , -
- Grip
- Box wrench P16 x 14
- Handle pin spanner
- Pin spanner
- No.3 cross point screw driver



(1) Tool kit

## CLEANING AND WASHING OF VEHICLE

Follow the below mentioned steps for washing the vehicle.

- Wet the vehicle with light water spray. Avoid directing water to meter console, muffler outlets and electrical parts.
- Clean the headlamp lens and other plastic parts using a cloth or sponge dampened with a solution of mild detergent and water.
- Rub the soiled area gently rinsing it frequently with fresh water.
- After cleaning spray water thoroughly.
- Dry the vehicle by wiping with dry soft cloth.



### NOTE

- ***We at dealership take all above mentioned precautions like recommended detergents and usage of muffler caps/plugs during wash to ensure quality wash.***
- ***Do not use high pressure water (or air). It can damage certain parts of the vehicle.***

## MAINTENANCE

### The importance of maintenance

A well-maintained vehicle is essential for safe economical and trouble-free riding. It will also help reduce pollution.

To help you, take proper care of your vehicle, the following pages include a maintenance schedule and a maintenance record for regular scheduled maintenance.

These instructions are based on the assumption that the vehicle will be used exclusively for its designed purpose. Sustained high speed operation or operation in unusually wet or dusty conditions will require more frequent service than specified in the maintenance schedule. Consult your Authorised Distributor/Dealer for recommendation applicable to your individual needs and use. If your vehicle overturns or is involved in a crash, be sure your Authorised Distributor/Dealer inspects all major parts, even if you are able to make some repairs.



### WARNING

- ***Improperly maintaining this vehicle or failing to correct a problem before you ride can cause a crash in which you can be seriously hurt or killed.***
- ***Always follow the inspection and maintenance recommendations and schedules in this owner's manual.***

## Maintenance safety

This section includes instructions on some important maintenance tasks. You can perform some of these tasks with the tools provided (if you have basic mechanical skills).

Other tasks that are more difficult and require special tools are best performed by professionals. Wheel removal should normally be handled only by a Authorised Distributor/ Dealer skilled technician or other qualified technician; instructions are included in this manual only to assist in emergency service.

You will come across some of the most important safety precautions in the following pages of this manual.

However, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.



### WARNING

- ***Failure to follow maintenance instructions and precautions properly can seriously injure you.***
- ***Always follow the procedures and precautions in this owner's manual.***

## SAFETY PRECAUTIONS

- Make sure the engine is “OFF” before you begin any maintenance or repair. This will help to eliminate several potential hazards:
  - **Carbon monoxide poisoning from engine exhaust.**  
Be sure there is adequate ventilation whenever you operate the engine.
  - **Burns from hot parts.**  
Let the engine and exhaust system cool before touching.
  - **Injury from moving parts.**  
Do not run the engine unless instructed to do so.
- Read the instruction before you begin and make sure you have the tools and skills required.
- To help prevent the vehicle from falling over, park it on a firm, level surface on the main stand.
- To reduce the possibility of a fire or explosion, be careful when working around petrol or batteries. Use only nonflammable solvent, not petrol, to clean parts. Keep cigarettes, sparks and flames away from the battery and all fuel-related parts.

Remember that your Authorised Distributor/ Dealer knows your vehicle best and is fully equipped to maintain and repair it.

To ensure best quality and reliability, use only new Hero MotoCorp genuine parts for repair and replacement.

## MAINTENANCE SCHEDULE

Perform the pre-ride Inspection (**page 35**) at each scheduled maintenance period.

**I: INSPECT C: CLEAN R: REPLACE A: ADJUST L: LUBRICATE O: OIL CHANGE  
T: TOP UP E: EMISSION CHECK**

The following maintenance schedule specifies all maintenance required to keep your vehicle in peak operating condition. Maintenance work should be performed in accordance with standards and specifications of Hero MotoCorp by properly trained and equipped technicians. Your Authorised Distributor/Dealer meets all of these requirements.

Ensure that each paid service is availed within **90 days** or **3000 km** from the date of previous service, whichever is earlier.

↘ To be serviced by your Authorised Distributor/Dealer unless the owner has the relevant tools, technical information and is technically qualified.

✘ In the interest of safety, we recommend that these jobs are carried out only by your Authorised Distributor/Dealer.

**Note-1** : At higher odometer readings, repeat the frequency interval established here.

**Note-2** : Replace air cleaner element once in every **15000 km** or early replacement may be required when riding in dusty areas.

**Note-3** : Replace engine oil once in every **6000 km**. Top up if the oil level is at or near the lower level mark.

**Note-4** : Visit Authorised Distributor/Dealer for inspection, cleaning, lubrication and adjustment of drive chain at every **700 km**.

**Note-5** : Replace brake fluid once in every two years or **30000 km**, whichever is earlier.

**Note-6** : Inspect & maintain specified torque.

**Note-7** : Inspect the bearings free play, replace if necessary.

**Note-8** : Replace front fork oil once in a every **2 years** or **30000 km**, whichever is earlier.

**Note-9** : Inspect rear suspension mounting bushes play, replace rear shock absorber if necessary.

**Note-10** : Check idle CO emission along with idle rpm/idle CO adjustment (if required).







**Note-11** : Inspect the canister hoses for deterioration, damage or loose connections and canister for cracks or other damages.

**Note**: Always wipe the water from the vehicle after washing. Use clean soft cloth or pressurized air for completely drying the water.

## MAINTENANCE SCHEDULE

Dear Customer,

We would strongly recommend the following schedule, to keep your vehicle in perfect running condition and healthy environment. Vehicle subjected to severe use or ridden in dusty area will require more frequent servicing.

ITEMS	SERVICE	1 <sup>st</sup>	2 <sup>nd</sup>	3 <sup>rd</sup>	4 <sup>th</sup>	5 <sup>th</sup>	6 <sup>th</sup>	7 <sup>th</sup>	8 <sup>th</sup>	9 <sup>th</sup>	10 <sup>th</sup>	11 <sup>th</sup>	
	DAYS	1st 60	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	
	KM Note-1	500-750	3000-3500	6000-6500	9000-9500	12000-12500	15000-15500	18000-18500	21000-21500	24000-24500	27000-27500	30000-30500	
Fuel Line		I	I	I	I	I	I	I	I	I	I	I	
 Throttle Operation		I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	
Bystarter Operation		I	I	I	I	I	I	I	I	I	I	I	
 Engine Idle Speed/Carburetor		C, A	A	C, A	A	C, A	A	A	C, A	A	C, A	A	
Air Cleaner Element	<b>Note-2</b>	<b>Do not open air cleaner element unless there is a drivability problem</b>						R					R
Spark Plug		I, C, A	I, C, A	I, C, A	I, C, A	R	I, C, A	I, C, A	I, C, A	R	I, C, A	I, C, A	
 Valve Clearance		I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	
Engine Oil	<b>Note-3</b>	O	I, T	O	I, T	O	I, T	I, T	O	I, T	O	I, T	
 Engine Oil Strainer Screen		C		C		C		C		C		C	
 Engine Oil Centrifugal Filter		C		C		C		C		C		C	
Electric Starter		I	I	I	I	I	I	I	I	I	I	I	
Oil Circulation		I	I	I	I	I	I	I	I	I	I	I	
 Drive Chain	<b>Note-4</b>	<b>I.C.L.A at every 700 km</b>						<b>I.C.L.A at every 700 km</b>					
Drive Chain Slider			I	I	I	I	I	I	I	I	I	I	

ITEMS	SERVICE	1 <sup>st</sup>	2 <sup>nd</sup>	3 <sup>rd</sup>	4 <sup>th</sup>	5 <sup>th</sup>	6 <sup>th</sup>	7 <sup>th</sup>	8 <sup>th</sup>	9 <sup>th</sup>	10 <sup>th</sup>	11 <sup>th</sup>
	DAYS	1st 60	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90
	KM Note-1	500-750	3000-3500	6000-6500	9000-9500	12000-12500	15000-15500	18000-18500	21000-21500	24000-24500	27000-27500	30000-30500
Battery Voltage		I	I	I	I	I	I	I	I	I	I	I
Brake Pads Wear		I	I	I	I	I	I	I	I	I	I	I
Brake Fluid	<b>Note-5</b>	I	I	I	I	I	I	I	I	I	I	I
Brake System (Brake Pedal)			C, L		C, L		C, L		C, L		C, L	
⚡ Stop Lamp Switch		I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A
⚡ Headlamp Focus		I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A
Clutch Lever Free Play		I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A
Side Stand/ Main Stand (Optional)		L	L	L	L	L	L	L	L	L	L	L
Side Stand Switch		I, C	I, C	I, C	I, C	I, C	I, C	I, C	I, C	I, C	I, C	I, C
⚡ Nut, Bolts & Fasteners	<b>Note-6</b>	I	I	I	I	I	I	I	I	I	I	I
✘ Wheels Bearings	<b>Note-7</b>	I	I	I	I	I	I	I	I	I	I	I
✘ Wheels/Tyres		I	I	I	I	I	I	I	I	I	I	I
✘ Steering Head Bearing		I	I, A	I	I, A	I, L, A	I	I	I, A	I, L, A	I	I, A
✘ Front Suspension/Oil	<b>Note-8</b>	I	I	I	I	I	I	I	I	I	I	I
⚡ Rear Suspension	<b>Note-9</b>	I	I	I	I	I	I	I	I	I	I	I
Secondary Air Injection				I		I		I		I		I
✘ Muffler (Catalytic Converter)	<b>Note-10</b>			I, E		I, E		I, E		I, E		I, E
⚡ Evaporative Emission Control System	<b>Note-11</b>	I	I	I	I	I	I	I	I	I	I	I




## SPARK PLUG INSPECTION

### Recommended plugs:

### NGK-CPR 8 EA9, BOSCH UR5DC

For most riding conditions this spark plug heat range number is satisfactory. However, if the vehicle is going to be operated for extended periods at high speeds or near maximum power in hot climates, the spark plug should be changed to a cold heat range number, consult Authorised Distributor/Dealer on this if required.


- Clean dirt around the spark plug base.
- Disconnect the noise suppressor cap (1) and remove the spark plug (2) with the help of spark plug box wrench provided in the tool bag.

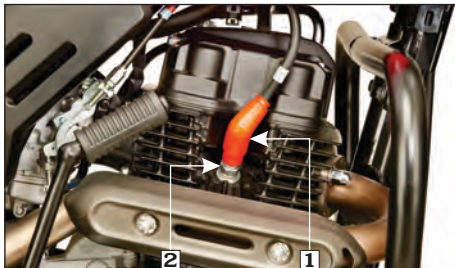

(1) Noise suppressor cap      (2) Spark plug

- Visually inspect the spark plug electrodes for wear. The center electrode should have square edges and the side electrode should not be eroded. Discard the spark plug if there is apparent wear or if the insulator is cracked or chipped.

- Make sure that the spark plug gap is **0.8-0.9 mm** using a wire-type feeler gauge. If adjustment is necessary, bend the side electrode carefully. Make sure the plug washer is in good conditions.

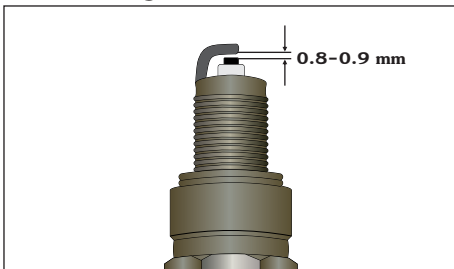

- With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.
- Tighten a new spark plug 1/2 turn after the plug seats, with a spark plug box wrench to compress the washer. If you are reusing a plug, it should only take 1/8-1/4 turn after the plug seats.

### ENGINE OIL

Use only hero genuine engine oil.

**BRAND: Hero 4T plus**

**GRADE: SAE 10W 30 SL Grade**

**(JASO MA2).**

Manufactured by:


- Tide Water Oil Co. (India) Ltd.
- Savita Oil Technologies Limited.
- Bharat Petroleum Corporation Limited.

**OIL CAPACITY : 1200 ml**

## Engine oil level inspection/


### Top up process

Check engine oil level each day before operating the vehicle. The oil level dipstick (1) is on the right crankcase cover for measuring oil level. Oil level must be maintained between the upper (2) and lower (3) level marks on the oil level dipstick.

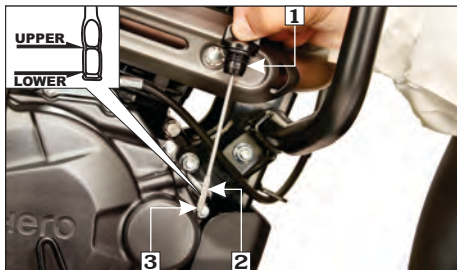

(1) Oil level dipstick (2) Upper level mark  
(3) Lower level mark

- Do top up if oil level reaches towards the lower level mark or every 3000 km whichever is earlier.
- Park the vehicle on its main stand.
- Start the engine & let it idle for 3-5 minutes.
- Slightly loosen the engine oil check bolt (4) and check the engine oil entry into the cylinder head cover.

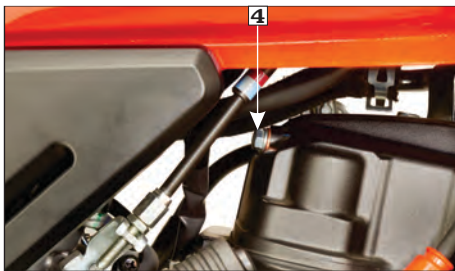


(4) Engine oil check bolt

- After checking the oil circulation, tighten the engine oil check bolt.
- Stop the engine and wait for 2-3 minutes.
- Remove the oil level dipstick, wipe it clean and insert without screwing it in.
- Remove the oil level dipstick and check the oil level.
- If required, add the specified oil up to the upper level mark. Do not overfill.
- Quantity of oil to be filled is 1070 ml (approx.) during oil change (when right crankcase cover is not removed).
- Reinstall the oil level dipstick with new O-ring and check for oil leaks.

## Engine oil replacement/

### Oil circulation inspection


- Start the engine, warm it up for several minutes and then turn it off.
- Wait a few minute until the oil settles down.
- Remove the bash plate bolts (1) and bash plate (2).

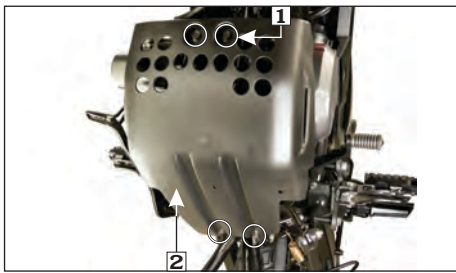

**(1) Bash plate bolts**

**(2) Bash plate**

- To drain the oil, remove the oil level dipstick, drain bolt (3) and sealing washer (4).

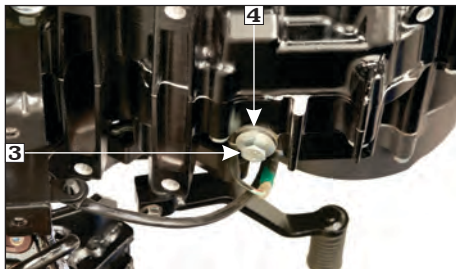

**(3) Drain bolt**

**(4) Sealing washer**

- After the oil has completely drained, reinstall the drain bolt (3) with a new sealing washer (4).
- Fill the crankcase through the oil filler hole with 1070 ml (approximately) of recommended grade oil during oil change

(when right crankcase cover is not removed).


- Reinstall the oil level dipstick with a new O-ring.
- Start the engine and allow it to idle for few minutes.
- Stop the engine and let the engine oil settle down.
- Recheck the oil level.
- Make sure that oil level is at the “UPPER” level mark of the oil level dipstick with the vehicle in an upright position and that there are no oil leaks.

### **! CAUTION**

- Running the engine with insufficient oil can cause serious engine damage.*
- Running the engine with excessive oil can cause spark plug fouling & loss in performance.*
- Engine oil is a major factor affecting the performance and service life of the engine. Non-detergent, vegetable or castor based racing oils are not recommended.*


### **OIL FILTER SCREEN & CENTRIFUGAL FILTER CLEANING**

- Drain the engine oil thoroughly (**page 46**).
- Remove the bash plate (1).
- Remove the kick starter pedal (2).
- Disconnect the clutch cable (3) from right crankcase cover (4).
- Remove the swingarm nut (5), muffler mounting bolt (6), rider footrest bracket cover bolt (7), footrest bracket assembly (8) and right crankcase cover.

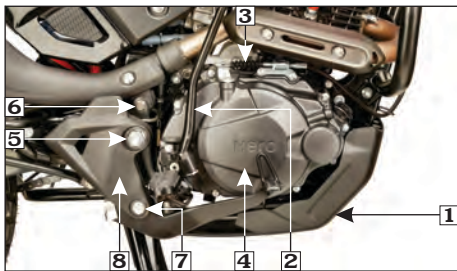

(1) Bash plate (2) Kick start pedal  
 (3) Clutch cable (4) Right crankcase cover  
 (5) Swingarm nut (6) Muffler mounting bolt  
 (7) Rider footrest bracket cover bolt  
 (8) Footrest bracket assembly

- Remove the dowel pins (9) and gasket (10).
- Remove the oil filter screen (11) and wash it in clean non flammable or high flash point solvent (kerosene).

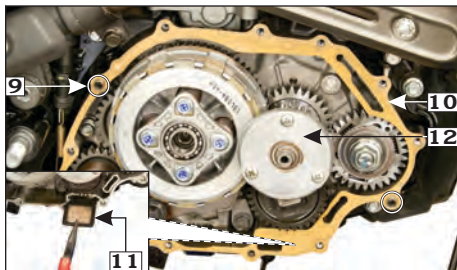

(9) Dowel pins (10) Gasket (11) Oil filter screen (12) Centrifugal filter cover

- Reinstall the filter screen with the tapered end facing in.
- Remove centrifugal filter cover with gasket (12) & clean the centrifugal filter (13) with non flammable or high flash point solvent (kerosene).



(13) Centrifugal filter

- Reinstall the centrifugal filter cover with new gasket.
  - Install the new dowel pins & gasket, right crankcase cover and connect the clutch cable.
  - Install the footrest bracket assembly.
  - Install and tighten the rider footrest bracket cover bolt, muffler mounting bolt and swingarm nut.
- Swingarm nut torque: 5.4 kgf-m**
- Install the kick starter pedal and bash plate.
  - Fill the crankcase with clean engine oil as per specification (**page 45**).



## NOTE


- Clean filters as specified in the maintenance schedule.
- Ensure to replace gasket & dowel pin with new one once removed

## AIR CLEANER

### Air cleaner element inspection


The air cleaner is wet paper pleated type filter which has enhances filtering efficiency. The air cleaner should be replaced at regular intervals (page 42). When riding in dusty areas, more frequent replacement may be necessary.

- Remove the seat (page 33).
- Remove the right side cover screws (1), side cover (2) by releasing the lug from the grommet (3) and slide the cover towards the rear to release tab from the slot (4).

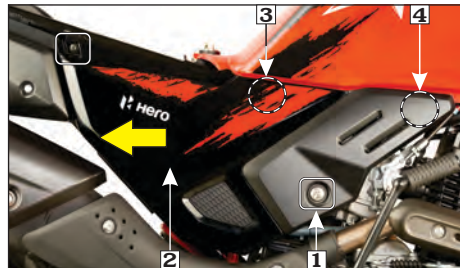


- (1) Right side cover screws      (2) Side cover  
(3) Lug/Grommet                      (4) Tab/Slot

- Remove the air cleaner cover screws (5) and the cover (6).

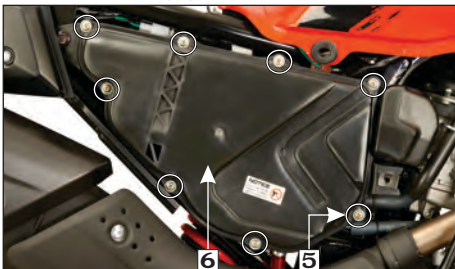


- (5) Air cleaner cover screws  
(6) Air cleaner cover

- Remove the air cleaner element (7) from air cleaner housing (8).

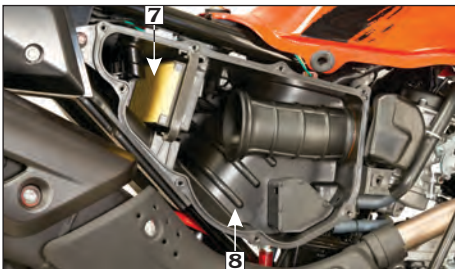

- (7) Air cleaner element  
(8) Air cleaner housing

**! CAUTION**

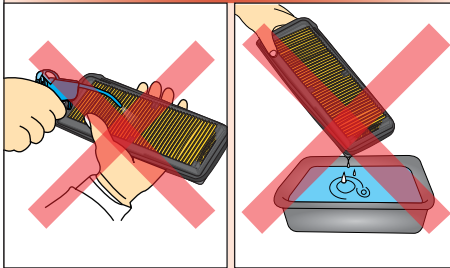


- *Never wash or clean the wet, paper pleated type filter. Replace filter element once in every 15000 km.*
- *Replace it earlier if it becomes very dirty, damage on surface or on the sealing area.*

- Clean the air cleaner housing (8) using a shop towel.
- Install the new air cleaner element.
- Install the air cleaner element cover.
- Install the right side cover.
- Install the seat (**page 33**).

### **Air cleaner drain tube cleaning**

Remove the drain tube (1) and drain the deposit into a container.

Follow the above process more frequently when riding in rain or at full throttle.

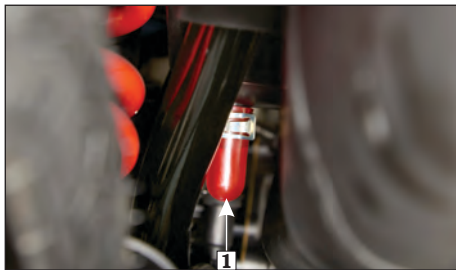

(1) Drain tube

 **NOTE**

*Always ensure to reinstall the drain tube after draining the deposit.*

## **CARBURETOR**

### **Idle speed adjustment**

The carburetor is factory preset in order to achieve optimum performance and meet emission standards.

However in case of specific requirement of tuning due to engine stalling in idle speed, please follow the instructions given here under:


- Park the vehicle on the main stand.
- Start the engine and let it idle for few minutes.
- Adjust idle speed with the throttle stop screw (1).

**IDLE SPEED: 1400±100 RPM**



## ! CAUTION

*Do not attempt to compensate for faults in other systems by adjusting idle speed. Visit your Authorised Distributor/Dealer for scheduled carburetor adjustment.*

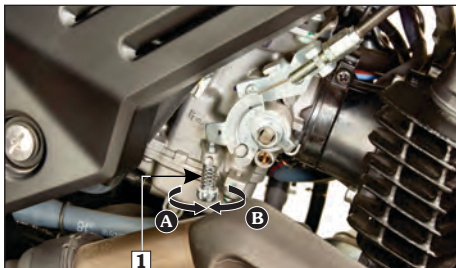

(1) Throttle stop screw

(A) Increase rpm

(B) Decrease rpm


## VALVE CLEARANCE ADJUSTMENT

Excessive valve clearance will cause noise, and little or no clearance will prevent the valve from closing and cause valve damage and power loss. Check valve clearance at the specified intervals (**page 42**).



## NOTE

*The checking or adjustment of valve clearance should be performed while the engine is cold. The clearance will change as the engine temperature rises.*

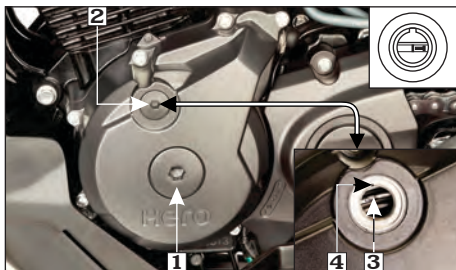

(1) Crankshaft hole cap  
(3) 'T' mark


(2) Timing hole cap  
(4) Index mark

- Remove the fuel tank.
- Remove the crankshaft hole cap (1) and timing hole cap (2).
- Remove the cylinder head cover.
- Rotate the flywheel anticlockwise until the "T" mark (3) on the flywheel coincides with the index mark (4) on the left crankcase cover. In this position the piston will either be on the compression or exhaust stroke.

The adjustment must be made when the piston is at top dead center and both the inlet and exhaust valves are closed.

This condition can be determined by moving the rocker arms. If they are free, it is an indication that the valves are closed and the piston is in compression stroke. If they are tight, the valves are open, rotate the flywheel 360° anticlockwise and realign the "T" mark with the index mark.

- Check the clearance by inserting the feeler gauge (5) between the adjusting screw (6) and valve stem (7).

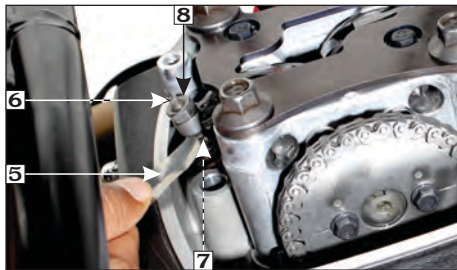

(5) Feeler gauge (6) Adjusting screw  
(7) Valve stem (8) Lock nut



#### Standard clearance (cold condition)

**Intake: 0.07 mm +0.01/-0.02**

**Exhaust: 0.09 mm +0.01/-0.02**

- If adjustment is required, adjust by loosening the lock nut (8) and turning the adjusting screw until there is a slight drag on the feeler gauge.

- After tightening the lock nut, check the clearance again.
- Installation is in the reverse order of removal.

#### NOTE


*Before inserting the feeler gauge, smear a bit of engine oil on the feeler gauge to avoid damage to the feeler gauge.*

## CLUTCH LEVER FREE PLAY

### Adjustment

Clutch adjustment may be required if the vehicle stalls when shifting into gear or tends to creep or if the clutch slips, causing acceleration to lag behind engine speed.


Normal clutch lever free play (1) is 10-20 mm at the lever (2).

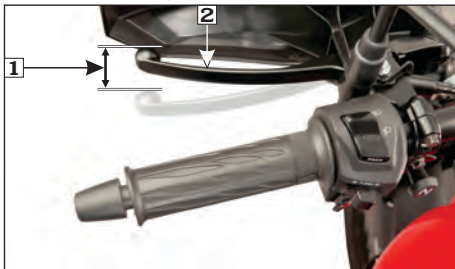

(1) Free play: 10-20 mm (2) Clutch lever

- To adjust the free play, loosen the lock nut (3). Turn the adjusting nut (4) to obtain the specified free play. Tighten the lock nut and check the adjustment.



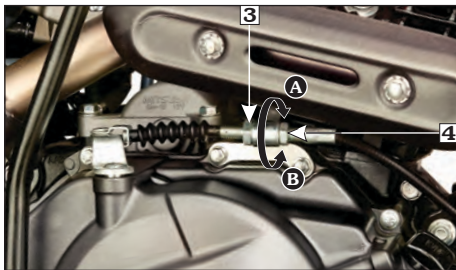

**(3) Lock nut (4) Clutch cable adjusting nut  
(A) Decrease free play (B) Increase free play**

- Start the engine, press the clutch lever and shift into gear. Make sure the engine does not stall, and the vehicle does not creep. Gradually release the clutch lever and open the throttle. The vehicle should start smoothly and accelerate.



#### NOTE

***If proper adjustment cannot be obtained or the clutch does not work correctly, visit your Authorised Distributor/Dealer.***


#### Other checks

- Check the clutch cable for kinks or signs of wear that could cause sticking or failure.
- Check for clutch cable model. Use genuine clutch cables.
- Check for clutch cable routing.

## THROTTLE OPERATION

### Cable inspection


Check for smooth rotation of the throttle grip from the fully open to the fully closed position. Check at full left and full right steering positions. Inspect the condition of the throttle cable from the throttle grip down to the carburetor. If the cable is kinked, chafed or improperly routed, it should be replaced or rerouted. Standard throttle grip free play (1) is approximately 2–6 mm of grip rotation.

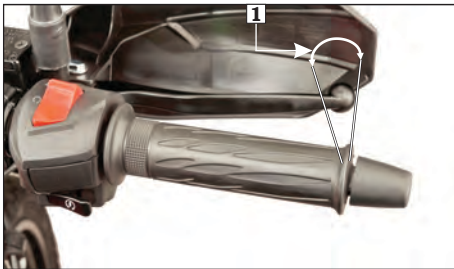

**(1) Free play: 2–6 mm**

### Free play adjustment


To adjust the free play, slide the boot (2), then loosen the lock nut (4). Turn the adjuster (3) to adjust free play. After adjustment, tighten the lock nut and slide the boot on the adjuster and locknut securely.

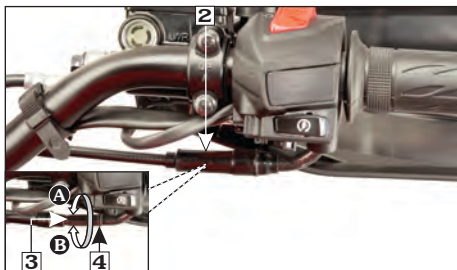

**(2) Boot (3) Adjuster (4) Lock nut**  
**(A) Decrease free play (B) Increase free play**

## BYSTARTER OPERATION

To apply bystarter, pull the knob (1) outwards (towards the rider) for smooth operation. After checking the operation, push it back to OFF position (as shown in the picture).

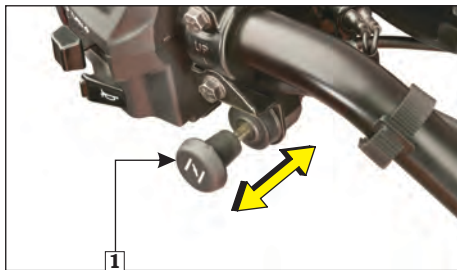

**(1) Bystarter knob**

## NOTE


*Do not accelerate during starting when the bystarter is "ON".*

## DRIVE CHAIN SLACKNESS

The service life of the drive chain depends upon proper lubrication and adjustment. Poor maintenance can cause premature wear or damage to the drive chain and sprockets. The drive chain (1) should be checked and lubricated as part of the pre-ride inspection (page 35). Under severe usage, or when the vehicle is ridden in unusually dusty areas, more frequent maintenance will be necessary.

### Inspection

- Turn the engine "OFF", park the vehicle on its main stand and shift the transmission to neutral.
- Drive chain slack (2) should be checked in the lower run midway between the sprockets. Move the drive chain up and down by hand and chain slack should be adjusted to 30-35 mm vertical movement by hand.
- Rotate the wheel and check the drive chain slack. Repeat this procedure several times. Drive chain slack should remain constant (30-35 mm). If the chain is slack only in certain sections, some links are kinked or binding. Binding and kinking can be eliminated by frequent lubrication.

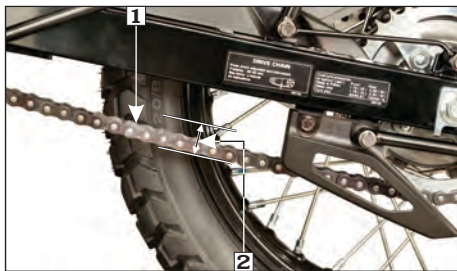


- (1) Drive chain  
 (2) Drive chain slack: 30–35 mm



#### NOTE

*Drive chain slack should be adjusted at your Authorised Distributor/Dealer as per the specification.*

- Turn the chain to view chain lock plate (3). Ensure that the chain lock plate open end (4) is installed in the opposite direction of the chain rotation.

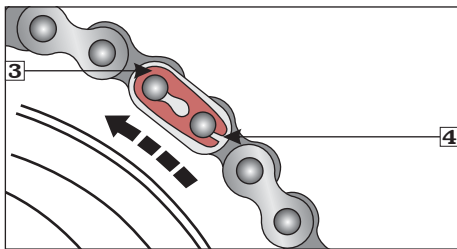

- (3) Chain lock plate      (4) Open end

- Rotate the rear wheel slowly and inspect the drive chain and sprockets for any of the following conditions.

#### Drive chain

- Damaged rollers
- Loose pins
- Dry or rusted links
- Kinked or binding links
- Excessive wear
- Improper adjustment
- Damaged or missing O-rings.


#### Sprockets

- Excessively worn teeth
- Broken or damaged teeth.

If the drive chain has damaged rollers, loose links or missing O-rings, replace it. If the chain is dry or rusted, it should be lubricated.

Lubricate the chain if the links are kinked or binding. If the problem is not solved after lubrication, replace the chain.

If the drive chain or sprockets are excessively worn or damaged, they should be replaced.

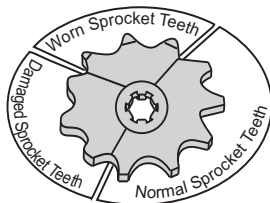

## **!** CAUTION

**Always replace the drive chain and sprockets as a set. Otherwise the new part will wear prematurely.**


### Adjustment

Drive chain slack should be checked and adjusted, if necessary, at every 700 km.

When operated at sustained high speeds or under conditions of frequent rapid acceleration, the chain may require more frequent adjustments.

If the drive chain requires adjustment, follow the procedures below:

- Park the vehicle on its main stand with the transmission in neutral and the ignition switch in "OFF" position.
- Loosen the rear axle nut (1).

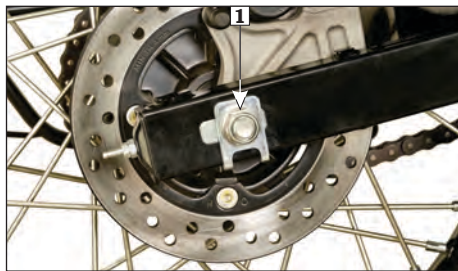


**(1) Rear axle nut**

- Loosen the drive chain lock nut (3).
- Turn the adjusting nut (4) in an equal number of turns until the correct drive chain

slack is obtained. Turn the adjusting nut clockwise to decrease the slack or anticlockwise to increase the slack of the chain.

- Align the chain adjuster index mark (5) with the rear edge (6) of the adjusting slots on both sides of the swingarm equally.

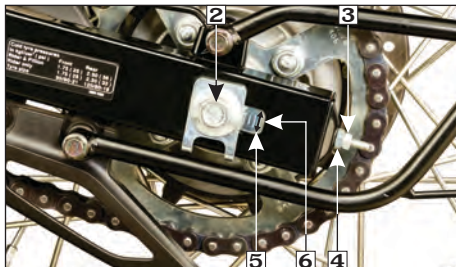

**(2) Axle (3) Drive chain lock nut  
(4) Drive chain adjusting nut (5) Index mark  
(6) Rear edge of adjusting slot**

- Tighten the rear axle nut.
- Torque: 68 N·m (6.8 kgf·m)**
- Check the drive chain slack again.
  - If after adjustment of drive chain slack, axle (2) touches the rear edge of adjustment slot (6). Chain kit has to be replaced.

## **!** WARNING

**If a torque wrench is not used for installation, see your Authorised Distributor/Dealer as soon as possible to check for proper assembly.**

## Cleaning and Lubrication

Lubricate every 700 km or sooner if the chain appears dry.

- Turn the engine off, park the vehicle on its main stand and shift the transmission into neutral. Open side stand to facilitate cleaning.
- Spray a commercially available chain cleaner for cleaning the drive chain over its entire length.



### NOTE

**Ensure that the chain cleaner and lubricant used is the one recommended for use on an O-ring chain, otherwise the O-rings may deteriorate, fail and lose their sealing properties.**

- Rotate the rear wheel backwards to expose the next section of the drive chain and repeat second step until all of the drive chain is cleaned.
- Let the spray dry for about five minutes.
- To remove stubborn dirt, scrub the rollers and side plates with soft nylon brush.
- Apply SAE 90 grade oil on the hanger side of the entire length of the chain using an oil can.
- Wait for 7-10 minutes for penetration of lubricant inside the bush and roller wipe the excessive lubricant from the chain and nearby parts using a clean rag.



### NOTE

**Excessive lubricant if not wiped off, will aid in accumulation of dust, sand and dirt on the drive chain, increasing its wear and will also be sprayed on the vehicle as well due to chain movement.**




### CAUTION

- **Steam cleaning, high pressure washers and certain solvents can damage the drive chain O-rings.**
- **While lubricating and cleaning hold the rear wheel with one hand to prevent the possibility of your finger being trapped between the chain and sprocket.**
- **Clean and lubricate the chain, whenever possible, after riding the vehicle under rain or in terrain with excessive dust, mud or sand.**
- **The drive chain is fitted with O-rings between the link plates. These O-rings retain grease inside the chain to improve its service life. However, special precautions must be taken when adjusting, lubricating, washing and replacing the chain.**
- **If the chain is excessively dirty, it should be removed and cleaned before lubrication. For your own safety, we recommend that service be performed by an Authorised Distributor/ Dealer.**

## DRIVE CHAIN SLIDER INSPECTION


(Refer to “Maintenance Schedule” on **page 42**).

Check the chain slider (1) for wear. The chain slider must be replaced if wear limit is reached. For replacement, see your Authorised Distributor/Dealer.

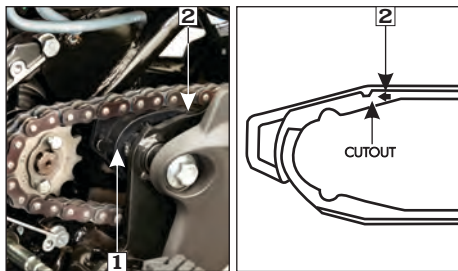

(1) Chain slider

(2) Wear limit

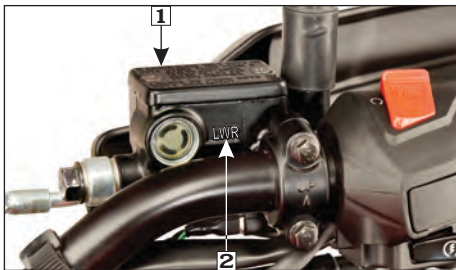

(1) Master cylinder/reservoir (2) Lower mark

#### NOTE

- Clean the dirt and mud accumulation between the front brake caliper (3), brake pads (4) and the disc (5) by using a water jet.
- Always contact your Authorised Distributor/Dealer for refilling of master cylinder/reservoir when necessary. Do not mix DoT 3 and DoT 4 brake fluid.
- Always use recommended tyres (page 64) for better braking performance.

## BRAKES

Refer to the safety precautions on (page 41).

### (a) Front brake


#### Master Cylinder/Reservoir (1)

**Location :** Right handlebar.

#### Brake fluid recommended:

DoT-4/DoT-3.

**Fluid level** - Ensure that the brake fluid level does not fall below “LWR” (lower) mark (2) on master cylinder, when checked with the master cylinder parallel to the ground. The level decreases gradually due to piston movement to compensate pad wear. If the level decreases abruptly, check for the leakages in the brake system and consult your Authorised Distributor/Dealer.

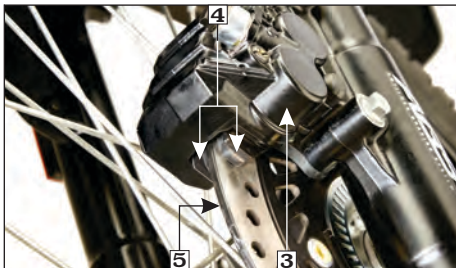

(3) Front brake caliper (4) Brake pad (5) Disc



## (b) Rear brake

Refer to the safety precautions on (page 41).


Reservoir (1)

**Location :** Near pillion footrest.

**Brake fluid recommended:**

DoT-4/DoT-3.

**Fluid level** – Ensure that the brake fluid level does not fall below “LOWER” mark (2) on the reservoir parallel to the ground. The level decreases gradually due to piston movement to compensate pad wear. If the level decreases abruptly, check for the leakages in the brake system and consult your Authorised Distributor/Dealer.

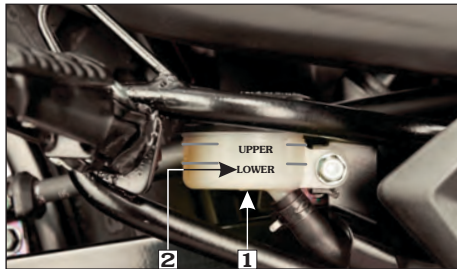

(1) Reservoir


(2) “LOWER” mark



### NOTE

- Clean the dirt and mud accumulation between the rear brake caliper (3), brake pads (4) and the disc (5) by using a water jet.

- Always contact your Authorised Distributor /Dealer for refilling of reservoir when necessary. Do not mix DoT 3 and DoT 4 brake fluid.

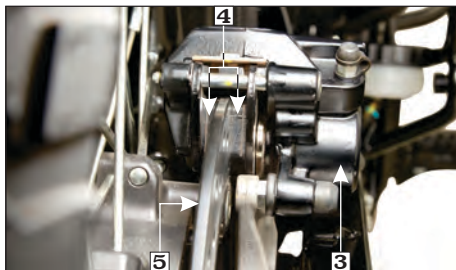


(3) Rear brake caliper (4) Brake pads (5) Disc

## (c) Brake pad wear

Brake pad wear depends upon the severity of usage, type of riding & road conditions. Generally, the pads will wear faster on wet & dirty roads. Inspect the pads at each regular maintenance interval.

### Front brake

- Check the brake pads for wear by examining the wear indicator groove (1) on each pad.
- If either pad is worn to the bottom of the grooves replace both pads as a set. Visit your Authorised Distributor/Dealer for this service.

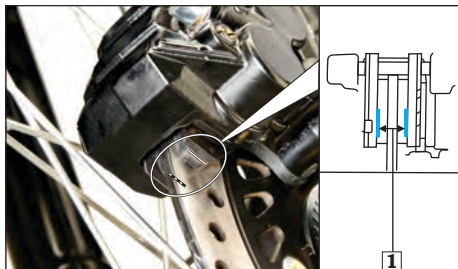


**(1) Wear indicator groove**

### Rear brake

Check the wear indicator groove (1) in each pad.

If either pad is worn to the bottom of the groove, replace both as a set. Visit your Authorised Distributor/Dealer for this service.

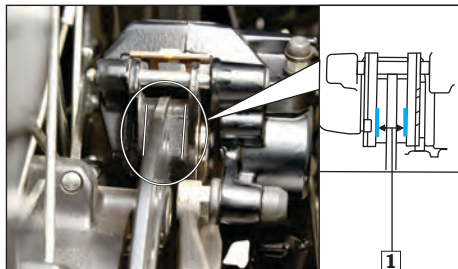

**(1) Wear indicator groove**

## WARNING

*Always apply front and rear brakes simultaneously to avoid skidding of vehicle.*

## SUSPENSION

### Front and rear suspension inspection

- Check the front forks by locking the front brake and pumping the front fork up and down vigorously. The suspension action should be smooth and there should be no oil leakage.




- Check the rear mono shock absorber by pushing hard downwards on rear grip while the vehicle is not parked on stand. The suspension action should be smooth and there should be no oil leakage.

### Rear mono shock absorber adjustment

Rear mono shock absorber adjustment can be made according to the load/road conditions.

- In direction A: Softer
- In direction B: Stiffer



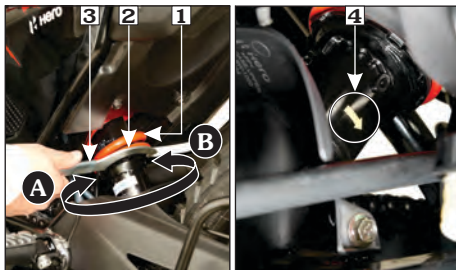

- (1) Rear mono shock absorber (2) Pin spanner  
 (3) Pin spanner handle (4) Arrow mark sticker  
 (A) Stiffer (B) Softer



### NOTE

- To adjust the rear mono shock absorber (1), use the rear shock absorber adjustment tool [Pin spanner (2) with handle (3)] available in the tool kit.
- Rear mono shock absorber arrow mark sticker (4) to be pointing towards vehicle front side during assembly on vehicle.



### WARNING


*This assembly contains high-pressure nitrogen gas. Any attempt to disassemble or refill this shock assembly may result in an explosion, causing serious injury. Exposure to flame or puncture may also result in an explosion. Replacement and disposal should only be done by your Authorised Distributor/ Dealer.*

## WHEEL

### (a) Front wheel Removal

Refer to the safety precautions on (page 41).

- Support the vehicle securely on the main stand and raise the front wheel off the ground.
- Remove the wheel speed sensor bolt (1) from right fork leg and disconnect the wheel speed sensor (2).

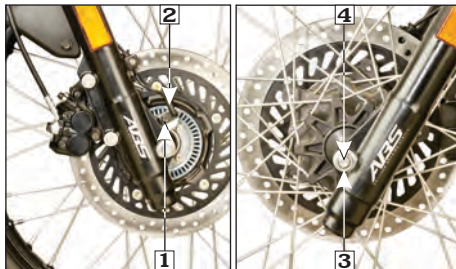

- (1) Wheel speed sensor bolt  
 (2) Wheel speed sensor  
 (3) Front axle nut  
 (4) Axle


- Remove the front axle nut (3), remove the axle (4) and wheel.



### CAUTION

*Do not operate front brake lever when the wheel is removed.*

- Remove the side collars (5) from both sides to the wheel.

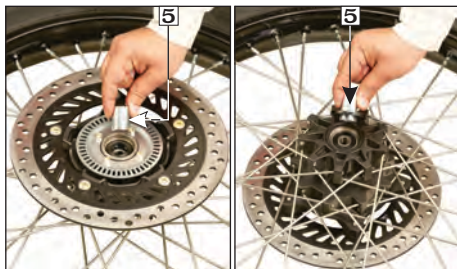


(5) Side collars

### Installation

- Install the side collars (1) to both sides of the wheel hub.
- Insert the disc (2) between the pads in the caliper assembly (3). When installing the wheel, carefully fit the brake disc between the brake pads to avoid damage to the pads.
- Tighten the front axle nut (4) to the specified torque.

**TORQUE : 5.9 kgf-m**

- Install the wheel speed sensor (5).
- After installing the wheel apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

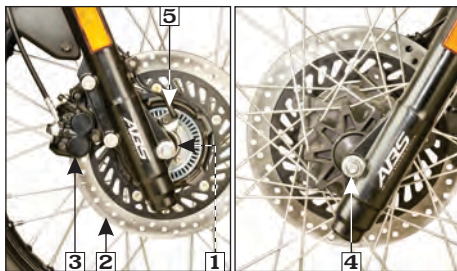


- |                        |                    |
|------------------------|--------------------|
| (1) Side collar        | (2) Disc           |
| (3) Caliper            | (4) Front axle nut |
| (5) Wheel speed sensor |                    |

### (b) Rear wheel


#### Removal

Refer safety precautions on **(page 41)**.

- Support the vehicle securely on the main stand and raise the rear wheel off the ground.
- Remove the rear axle nut (1) and indicator plate (2).
- Remove the axle (3) and the right side collar (4).
- Move the caliper assembly (5) upwards.
- Remove the wheel.

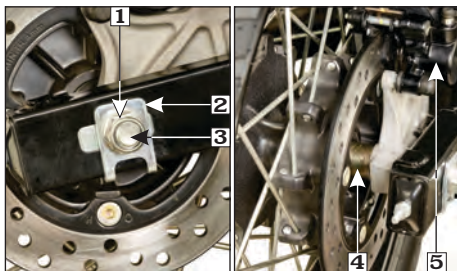

(1) Rear axle nut (2) Indicator plate (3) Caliper holder  
(4) Side collar (5) Caliper assembly

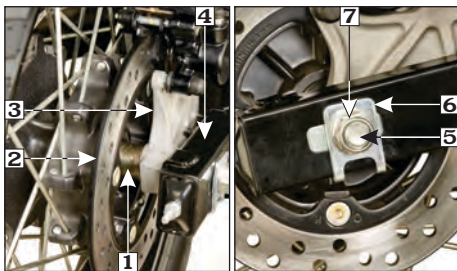

(1) Side collar (2) Disc (3) Caliper holder  
(4) Swingarm (5) Rear axle  
(6) Indicator plate (7) Rear axle nut

### Installation


- Install the side collar (1) to the right side of the wheel hub.
- Position the rear wheel between the swingarm.
- Insert the disc (2) between the pads in the caliper assembly. When installing the wheel, carefully fit the brake disc between the brake pads to avoid damage to the pads.
- Align the rear caliper holder (3) with the swingarm (4).
- Insert the axle (5) from the left side through the swingarm, wheel hub, collar and rear caliper holder.
- Install the indicator plate (6) and tighten the rear axle nut (7) to the specified torque.

**TORQUE : 6.8 kgf-m**

- Adjust the drive chain slack (**page 54**).

### MAIN STAND (OPTIONAL)/ SIDE STAND LUBRICATION

- Park the vehicle on the level surface.
- Check the main/side stand return spring for damage or loss of tension.
- Check the main stand (1)/side stand (2) for freedom of movement.

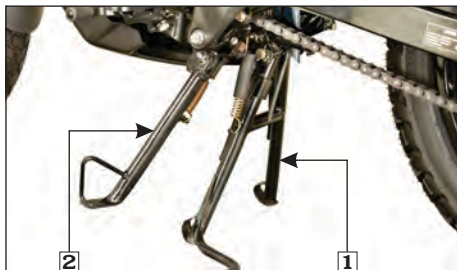

(1) Main stand (optional) (2) Side stand

- Lubricate the side stand.
- Make sure the main/side stand is not bent.

## TYRES

The tyres that are fitted on your vehicle are designed to match the performance capabilities of handling, braking, durability and comfort.

To safely operate your vehicle, the tyres must be of recommended type and size, in good condition with adequate tread, and correctly inflated. The recommended tyres size is :

<b>Front</b>	90/90-21 M/C 54S
<b>Rear</b>	120/80-18 M/C 62S

### Air pressure

Properly inflated tyres provide the best combination of handling, tread life, and riding comfort. Generally, under inflated tyres wear unevenly, adversely affect handling, and are more likely to fail from being overheated.

Under inflated tyres can also cause wheel damage in rocky terrain.

Over inflated tyres make your vehicle ride more harshly, are more prone to damage from surface hazards and wear unevenly.

Make sure the valve stem caps are secure.

If necessary, install a new cap.

The recommended “cold” tyre pressure are:

	<b>Rider only</b>	<b>Rider and Pillion</b>
<b>Front</b>	1.75 kgf/cm <sup>2</sup> (25 psi)	1.75 kgf/cm <sup>2</sup> (25 psi)
<b>Rear</b>	2.30 kgf/cm <sup>2</sup> (33 psi)	2.50 kgf/cm <sup>2</sup> (36 psi)



(1) Air pressure gauge

### ! CAUTION


**Over inflation/Under inflation will affect the performance.**

### Inspection


Whenever you check the tyre pressure, you should also examine tyre treads & side walls for wear, damage & foreign objects:

Look for :

- Bumps or bulges in the side of the tyre or the tread. Replace the tyre if you find any bumps or bulges.
- Cuts, splits or cracks in the tyre. Replace the tyre if you can see fabric or cord.

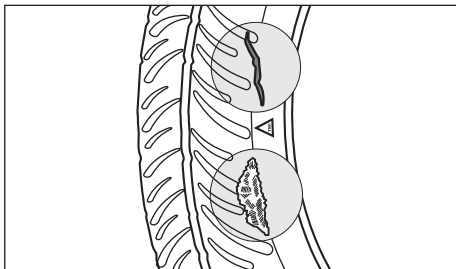

- Excessive tread wear.

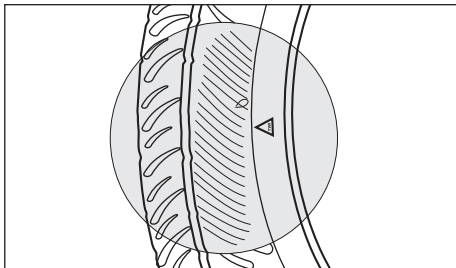

- Carefully inspect the tyres for any damage, if the vehicle hits a pothole or hard object.

### Tread wear


Replace tyres immediately when the tyres get worn upto the wear indicator (1) on the tyre. The tread limits are :

### MINIMUM TREAD DEPTH:

**Front:** 1.0 mm

**Rear:** 1.0 mm

Check the tread wear indicator for tyre wear.

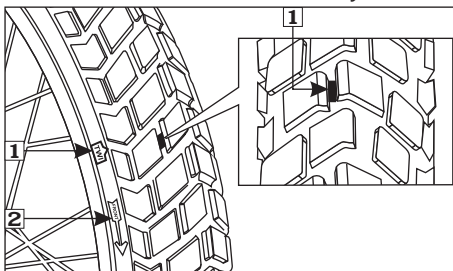

(1) Tread wear indicator

(2) Arrow mark

### Unidirectional tyres

Ensure the arrow mark (2) on the tyre is in the same direction as that of forward rotation of the wheel, whenever the tyre is removed and put back in case of puncture.

### ! WARNING

- *Using tyres that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.*
- *Operation with excessively worn tyres is hazardous and will adversely affect traction and handling.*
- *Follow all instruction in this owner's manual regarding tyre inflation and maintenance.*
- *Under-inflation may result in the tyre slipping on or tyre coming off the rim.*
- *Always use the size and type of tyres recommended in this owner's manual.*

- *Spoke tightness and wheel centering and alignment are essential for vehicle safety. During the first 1,000 km, the spokes become loose due to initial seating. Excessively loose spokes will cause instability at high speeds and possible loss of control.*
- *Inspect the spokes and wheel rims more frequently when the vehicle is ridden in rough terrain.*

## NUTS, BOLTS & FASTENERS

- Tighten bolts and nuts at regular interval shown in the maintenance schedule.
- Check that all chassis nuts and bolts are tightened to correct torque values.
- Check that all cotter pins, safety clips, hose clamps and cable stays are in place.



## BATTERY

Refer to the safety precautions on **(page 41)**.

### Location

The battery is located behind the left side cover.

### Specification

12V-4 Ah, (ETZ-5) \*MF Battery

It is not necessary to check the battery electrolyte level or add distilled water as the battery is a **Maintenance-Free (sealed)** type. If your battery seems weak and/or electrolyte is leaking (causing hard starting or other electrical troubles), contact your Authorised Distributor/Dealer.



### NOTE



*This symbol on the battery means that this product must not be treated as household waste.*



*This symbol on the battery means the old battery must be returned to your Authorised Distributor/Dealer as it must be treated as recyclable material.*

- *Battery is a maintenance-free (sealed) type and can be permanently damaged if the sealing strip is removed.*
- *An improperly disposed battery can be harmful to the environment and human health. Always confirm local regulations for battery disposal.*

**⚠ WARNING**

- *The battery gives off explosive hydrogen gas during normal operation.*
- *A spark or flame can cause the battery to explode with enough force to seriously hurt you.*
- *Wear protective clothing and a face shield, or have skilled technician do the battery maintenance.*

### Battery charging

Always visit your Authorised Distributor /Dealer if you see any symptom of battery discharge as earliest as possible to get the battery charged. The battery has a tendency to discharge rapidly if additional electrical accessories are fitted on the vehicle.


### Battery storage

- If in case your vehicle is not used for more than a month remove the battery, fully charge and store in a cool and dry place.
- If the battery is expected to be stored for more than two months, ensure to fully charge the battery once in a month.
- Always ensure the battery is fully charged before installation.
- Ensure the battery leads are properly connected to the battery terminals during installation.

### Battery removal


- Make sure the ignition switch is “OFF” (⊗).
- Remove the seat (**page 33**).
- Remove the right side cover screws (1), side cover (2) by releasing the lug from the

grommet (3) and slide the cover towards the rear to release tab from the slot (4).

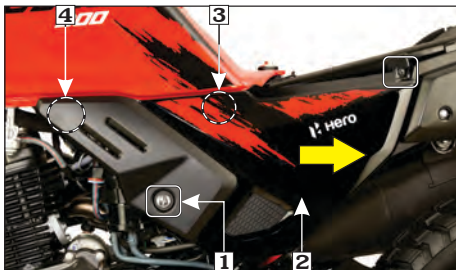

(1) Right side cover screws      (2) Side cover  
(3) Lug/Grommet                      (4) Tab/Slot


- Disconnect the (-)ve terminal lead (5) from the battery first, then disconnect the (+)ve terminal lead (6).
- Remove the battery clamp bolt (7) and the battery clamp (8).

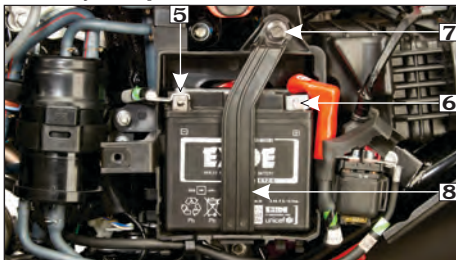

(5) (-)ve terminal                      (6) (+)ve terminal  
(7) Battery clamp bolt                (8) Battery clamp



- Pullout the battery (9) from the battery box.

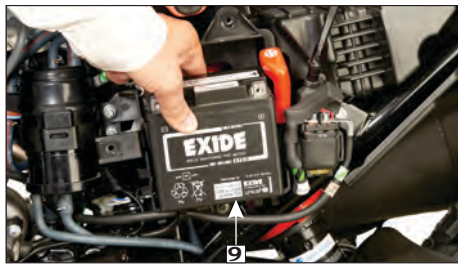

(9) Battery

### Battery installation

- Reinstall in the reverse order of removal. Be sure to connect the (+)ve terminal first, then the (-)ve terminal.
- Check all bolt and other fasteners are secure properly.

### FUSE REPLACEMENT

Refer to the safety precautions on (page 4 1).


#### Fuse box (1)

**Location:** Below the seat.

#### Fuse type: Blade fuse

Main fuse (2) : (15A, 10A, 10A)

Spare fuse (3) : (15A, 10A)

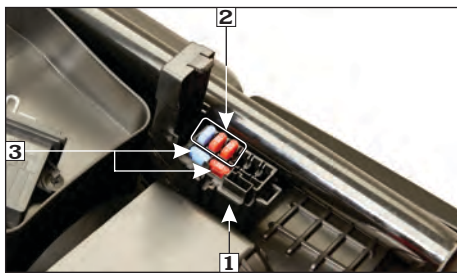

(1) Fuse box (2) Main fuse (15A, 10A, 10A)  
(3) Spare fuse (15A, 10A)


#### Starter magnetic switch (4)

**Location:** Inside left side cover, below the starter magnetic switch.

#### Fuse type: Blade fuse

Main fuse (5) : (20A)

Spare fuse (6) : (20A)

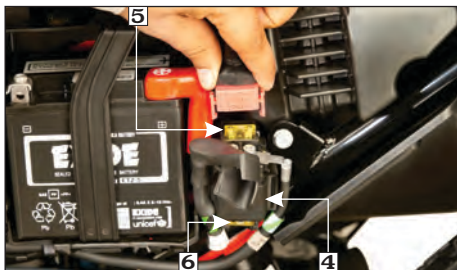

(4) Starter magnetic switch  
(5) Main fuse (20A) (6) Spare fuse (20A)

### ⚠ WARNING


- *Never use a fuse with a different rating from that specified. It may lead to serious damage to the electrical system or a fire due to short circuit.*
- *Battery gives off explosive gases. Keep sparks, flames & cigarettes away.*




## ! CAUTION

- Do not attempt to start or ride the vehicle without a charged battery, it can cause fusing of the bulbs and permanent damage to certain electrical components.
- Turn the ignition switch "OFF" before checking or replacing the fuse to prevent accidental short-circuiting.

GOOD FUSE

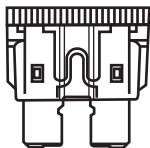


BLOWN FUSE

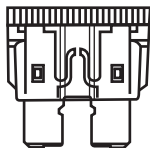

## STOP LAMP SWITCH

The stop lamp switch (1) must be adjusted so that stop lamp glows when rear brake is applied. The procedure for adjusting stop lamp is as follows :

- Turn the ignition switch to the "ON" (⊞) position.
- Turn the adjusting nut (2) to position stop lamp switch at a point where the stop lamp glows once the brake pedal is depressed. Turn the adjusting nut in direction (A) to advance switch timing or in direction (B) to retard switch timing.

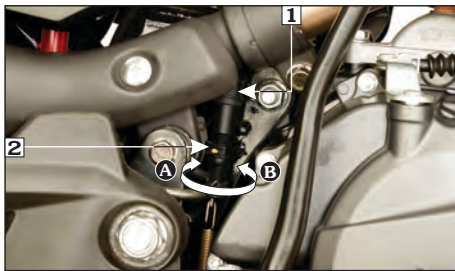


- (1) Stop lamp switch  
(2) Adjusting nut

- (A) Advance  
(B) Retard

## HEADLAMP FOCUS ADJUSTMENT

Headlamp is factory pre-set. However in case of adjustment required, please follow the steps as given below:

- Headlamp adjustment is done by loosening the bolts (1) located on both the sides of the headlamp assembly.

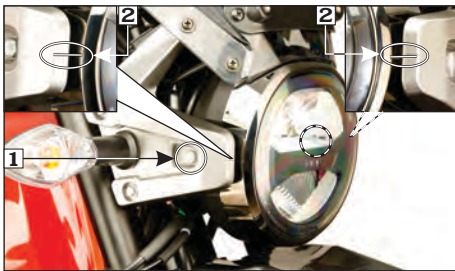

- (1) Adjusting bolts

- (2) Index marks

- Park the vehicle on its main stand on level ground.
- Adjust the headlamp by loosening the bolts (1) and moving the headlamp assembly up and down for correct focus adjustment.
- Align the headlamp casing index marks (2) to the index mark on the headlamp assembly cover.
- After adjusting the headlamp, tighten the headlamp adjusting bolt.

**⚠ WARNING**

***An improperly adjusted headlamp may blind oncoming rider/driver or it may fail to light the road for a safe distance.***

### CATALYTIC CONVERTER

This vehicle is equipped with a catalytic converter (1) in the muffler to meet the emission norms.

The catalytic converter contains noble metals that serve as catalyst, promoting chemical reactions to convert CO and HC in the exhaust to CO<sub>2</sub> and H<sub>2</sub>O (water vapour).

A defective catalytic converter contributes to air pollution and can impair your engine's performance.

Follow these guidelines to protect your vehicle's catalytic converter.

- Always use unleaded petrol. Even a small amount of leaded petrol can contaminate the catalyst metals, making the catalytic converter ineffective.
- Keep the engine tuned up.




**(1) Catalytic converter**

### AIR SUCTION VALVE (ASV) (SECONDARY AIR INJECTION SYSTEM)

Further to meet emission standards this vehicle is provided with the air suction valve.

Air suction valve (1) supplies fresh air from the air filter to the exhaust manifold to convert carbon monoxide to carbon dioxide. This reduces the CO% in the vehicle's exhaust.

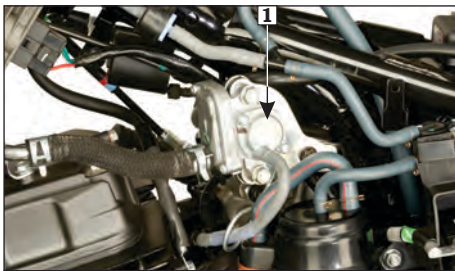


**(1) Air suction valve**

## EVAPORATIVE EMISSION CONTROL SYSTEM

This vehicle is equipped with an evaporative emission control system to meet emission standards. During warm weather, the petrol vapours which contain HC evaporates easily into the atmosphere from the fuel tank, if the fuel system is unsealed or open.

The evaporative emission control system is used to prevent petrol vapours from escaping into the atmosphere from fuel tank.

The canister (1) collects the fuel vapour from the fuel tank and then the fuel vapour is drawn into the engine for re-burning to avoid pollution caused by the fuel vapour diffused into the air.

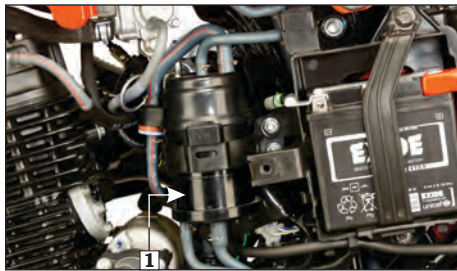

(1) Canister

## POLISHING OF VEHICLE

After washing your vehicle, wax all painted surfaces (except matte painted surfaces) using a commercially available polish/quality liquid or paste wax to finish the job. Use only a non abrasive polish or wax made specifically for automobiles. Apply the polish or wax according to the instructions on the container.



### NOTE

***Polishing or waxing is not applicable for models having matte paint.***

## BASIC TROUBLESHOOTING

### 1. STARTING TROUBLE - ENGINE DOES NOT START

#### A. ENGINE STOP SWITCH POSITION

Check engine stop switch position  
↓ "ON" (O) position

"OFF" → Turn to "ON" (O) position

**Consult Authorised Distributor/Dealer**

#### B. Fuel system

Check fuel valve position  
↓ "ON" (H) position

"OFF" → Turn to "ON" (H) position

Check fuel in fuel tank  
↓ OK

No fuel → Refill

Check fuel lines  
↓ OK

Leakage/Air lock → Rectify

**Consult Authorised Distributor/Dealer**

#### C. Electric Starter Not Working

Check fuse  
↓ OK

Fused → Replace fuse (ref. page 68)

Inspect battery  
↓ OK

Weak → **Consult Authorised Distributor/Dealer**

Check connections, ignition switch/starter switch  
↓ OK

Loose → Secure connections

**Consult Authorised Distributor/Dealer**

#### D. No Spark At Spark Plug

Check ignition switch  
↓ OK

"OFF" (X) position → Turn ignition switch "ON" (O)

Check spark plug for fouling/  
improper electrode gap  
↓ OK

No spark → Replace spark plug/adjust  
Spark Plug Gap (0.8-0.9 mm)

 
Check for poorly connected  
or loose spark plug wire  
↓ OK

Loose contact → Secure properly

**Consult Authorised Distributor/Dealer**




## BASIC TROUBLESHOOTING

### 2. ENGINE STARTS BUT STALLS



**Consult Authorised Distributor/Dealer**

   
### 3. POOR PICK UP



**Consult Authorised Distributor/Dealer**

### 4. ELECTRICAL SYSTEM

#### Feeble Horn Sound or No Light

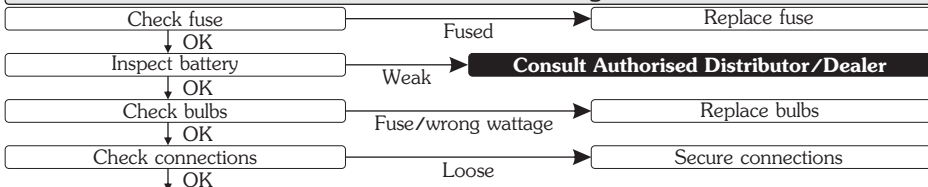

**Consult Authorised Distributor/Dealer**

## NAVIGATION SIGNS

**Navigation signs:** Hero navigation app. and meter console of your vehicle will display step by step navigation guidance/direction through below navigation signs when your vehicle is in navigation mode with your smartphone.



Turn Left



Turn Right



Turn Slight Left



Turn Slight Right



Turn Sharp Left



Turn Sharp Right



Straight



Merge



Keep Left



Keep Right



Ramp Left



Ramp Right



Round About Left



Round About Right



U Turn Left



U Turn Right



Fork Left



Fork Right



Ferry



Ferry Train



Destination Reached

Wrong way



Hero MotoCorp Ltd.

CUSTOMER'S COPY

**DELIVERY CERTIFICATE**

**No.: IB29A**

I certify having taken delivery of one Hero MotoCorp **XPULSE 200** Vehicle bearing the following particulars:-

**Engine No.** \_\_\_\_\_

**VIN** \_\_\_\_\_

**Colour/Model** \_\_\_\_\_ **Key No.** \_\_\_\_\_

**Allotment No.** \_\_\_\_\_ **Date of Sale** \_\_\_\_\_

**Customer's Name** \_\_\_\_\_

I have been explained by the dealer about correct and safe driving habits, warranty terms and conditions, service schedules and maintenance tips.

**Customer's Copy**



**Hero MotoCorp Ltd.**

**Alongwith the vehicle I have also received the following:-**

1. Owner's Manual
2. 2 Nos. Keys
3. 1 Set of tools **(for details see below)**
4. Standard Accessories
5. Battery            Make \_\_\_\_\_ Sr. No. \_\_\_\_\_
6. Tyre    **Front**    Make \_\_\_\_\_ Sr. No. \_\_\_\_\_  
              **Rear**     Make \_\_\_\_\_ Sr. No. \_\_\_\_\_

The vehicle has been delivered in factory fresh conditions to my satisfaction & I have understood all terms and conditions of warranty and shall abide by them.

**Customer's Name** \_\_\_\_\_

**Customer's Address** \_\_\_\_\_

**Customer's Signature** \_\_\_\_\_

**Authorised Distributor/Dealer Name** \_\_\_\_\_

**Authorised Distributor/Dealer Address** \_\_\_\_\_

**Details of Tool kit**

Tool bag, +, - No. 2 Driver, Grip, Box wrench P 16 x 14, Handle pin spanner, Pin spanner, No. 3 Cross point screw driver.





Hero MotoCorp Ltd.

DISTRIBUTOR/DEALER COPY  
AUTHORISED

**DELIVERY CERTIFICATE**

**No.: IB29A**

I certify having taken delivery of one Hero MotoCorp **XPULSE 200** Vehicle bearing the following particulars:-

**Engine No.** \_\_\_\_\_

**VIN** \_\_\_\_\_

**Colour/Model** \_\_\_\_\_ **Key No.** \_\_\_\_\_

**Allotment No.** \_\_\_\_\_ **Date of Sale** \_\_\_\_\_

**Customer's Name** \_\_\_\_\_

I have been explained by the dealer about correct and safe driving habits, warranty terms and conditions, service schedules and maintenance tips.

**Authorised Distributor/Dealer copy**



**Hero MotoCorp Ltd.**

**Alongwith the vehicle I have also received the following:-**

1. Owner's Manual
2. 2 Nos. Keys
3. 1 Set of tools **(for details see below)**
4. Standard Accessories
5. Battery            Make \_\_\_\_\_ Sr. No. \_\_\_\_\_
6. Tyre    **Front**    Make \_\_\_\_\_ Sr. No. \_\_\_\_\_  
              **Rear**     Make \_\_\_\_\_ Sr. No. \_\_\_\_\_

The vehicle has been delivered in factory fresh conditions to my satisfaction & I have understood all terms and conditions of warranty and shall abide by them.

**Customer's Name** \_\_\_\_\_

**Customer's Address** \_\_\_\_\_

**Customer's Signature** \_\_\_\_\_

**Authorised Distributor/Dealer Name** \_\_\_\_\_

**Authorised Distributor/Dealer Address** \_\_\_\_\_

**Details of Tool kit**

Tool bag, +, - No. 2 Driver, Grip, Box wrench P 16 x 14, Handle pin spanner, Pin spanner, No. 3 Cross point screw driver.



## WHAT ARE THE BENEFITS OF Hero MotoCorp GENUINE SPARE PARTS ?

- Assures long life
- Ensures economy for a long time
- Safety of vehicle and rider
- Peace of mind
- Value for money
- Assured quality

## CONSEQUENTIAL DAMAGES ON USING NON-GENUINE PARTS

<b>Clutch Plate</b>	<ul style="list-style-type: none"><li>• Material used is inferior</li><li>• Damages other parts of clutch like, clutch center and outer clutch</li><li>• Affects fuel efficiency</li><li>• Poor acceleration</li></ul>
<b>Cam Chain Kit</b>	<ul style="list-style-type: none"><li>• Poor performance</li><li>• Reduced life</li></ul>
<b>Gasket Cylinder Head</b>	<ul style="list-style-type: none"><li>• Improper sealing</li><li>• Engine knocking</li><li>• Leads to leakage and smoky exhaust</li><li>• Higher emission level</li></ul>



### CONSEQUENTIAL DAMAGES ON USING NON-GENUINE PARTS

<b>Element Air Cleaner</b>	<ul style="list-style-type: none"><li>• Improper air filtration resulting in premature engine failure</li><li>• Affects fuel efficiency</li><li>• Poor engine performance</li></ul>
<b>Spark Plug</b>	<ul style="list-style-type: none"><li>• Frequent stalling of engine</li><li>• Higher emission level</li><li>• Poor engine performance</li><li>• Affects fuel efficiency</li></ul>
<b>Brake Pads/Shoes</b>	<ul style="list-style-type: none"><li>• Poor braking efficiency</li><li>• Rider safety—an issue</li><li>• Discs/Drum wear out, resulting in subsequent repair cost</li></ul>
<b>Chain Sprocket Kit</b>	<ul style="list-style-type: none"><li>• Noisy Operation</li><li>• Failure of chain can cause fatal accident</li></ul>



# Hero MotoCorp Ltd.

## JOBS APPLICABLE TO PERIODIC SERVICES

- Test drive the vehicle if required for reported troubles, if any.
- Wash the vehicle, blow dry with air at every service.
- Fuel line inspection at every service.
- Inspect throttle free play and operation at every service, adjust if necessary.
- Inspect bystarter operation at every service.
- Clean carburetor at first service then every 6000 km., adjust if necessary.
- Replace air cleaner element at every 15000 km.
- Inspect, clean the spark plug at every service, adjust if necessary. (replace at every 12000 km).
- Inspect the valve clearance at every service, adjust if necessary.
- Engine oil top up or change as per the maintenance schedule.
- Clean engine oil strainer screen at first service then every 6000 km.
- Clean engine oil centrifugal filter at first service then every 6000 km.
- Inspect oil circulation at every service.
- Inspect electric starter operation at every service.
- Inspect, clean, lubricate and adjust the drive chain at every 700 km.
- Inspect the drive chain slider.
- Inspect battery voltage at every service and charge if required.
- Inspect brake pad and brake fluid level at every service, adjust brake pad if necessary.
- Clean and lubricate brake pedal at second service, then every 6000 km.
- Inspect all lamps, horn and switches at every service, adjust if necessary.
- Inspect headlamp focus at every service, adjust if necessary.
- Inspect clutch lever free play at every service, adjust if necessary.
- Lubricate the side stand and main stand (optional) at every service.
- Inspect and clean the side stand switch at every service.
- Inspect fasteners and tighten to the specified torque (if required).
- Inspect the bearings free play, replace if necessary.
- Inspect wheels/tyres. Inflate tyre to specified pressure at every service.
- Inspect steering for smooth operation, adjust (if necessary) in every alternate service and lubricate at every 12000 km.
- Inspect front suspension at every service, replace oil once in every 2 year or 30000 km whichever is earlier.
- Inspect rear suspension mounting bushes play, replace if necessary.
- Inspect secondary air injection system at every 6000 km.
- Inspect the canister hoses for deterioration, damage or loose connections and canister for cracks or other damages at every service.
- Test drive the vehicle for repair of problems reported.
- Polish entire vehicle.

**SERVICE RECORD SHEET**  
To be Filled in by Supervisor

Free/Paid Service	Km. Range	Date	Km. Reading	Job Card No.	Engine Oil Top-up/ Replace	Authorised Distributor/Dealer (Sig. & Stamp)
I	500 - 750					
II	3000 - 3500					
III	6000 - 6500					
IV	9000 - 9500					
V	12000 - 12500					
VI	15000 - 15500					
VII	18000 - 18500					
VIII	21000 - 21500					
IX	24000 - 24500					
X	27000 - 27500					
XI	30000 - 30500					
XII	33000 - 33500					
XIII	36000 - 36500					
XIV	39000 - 39500					
XV	42000 - 42500					
XVI	45000 - 45500					
XVII	48000 - 48500					



**NOTE**

*It is mandatory to avail all free and paid services as per the recommended schedule to be eligible for the warranty benefits. Please ensure that each paid service is availed within 90 days from the date of previous service or as per the recommended schedule, whichever is earlier.*

**SERVICE RECORD SHEET**  
**To be Filled in by Supervisor**

<b>Free/Paid Service</b>	<b>Km. Range</b>	<b>Date</b>	<b>Km. Reading</b>	<b>Job Card No.</b>	<b>Engine Oil Top-up/ Replace</b>	<b>Authorised Distributor/Dealer (Sig. &amp; Stamp)</b>
XVIII	51000 - 51500					
XIX	54000 - 54500					
XX	57000 - 57500					
XXI	60000 - 60500					
XXII	63000 - 63500					
XXIII	66000 - 66500					
XXIV	69000 - 69500					
XXV	72000 - 72500					

**REMARKS (IF ANY)**

---

---

---

---

---







**Hero MotoCorp Ltd.**

**OWNERSHIP RECORD AND DATA**

**NAME** \_\_\_\_\_

**ADDRESS** \_\_\_\_\_

**MODEL** \_\_\_\_\_ **REGN. NO.** \_\_\_\_\_

**ENGINE NO.** \_\_\_\_\_ **VIN** \_\_\_\_\_

**DATE OF PURCHASE** \_\_\_\_\_ **KM. READING** \_\_\_\_\_

**AUTHORISED DISTRIBUTOR/DEALER NAME** \_\_\_\_\_

**ADDRESS** \_\_\_\_\_

\_\_\_\_\_  
**BATTERY MAKE** \_\_\_\_\_ **SERIAL NO.** \_\_\_\_\_

**AUTHORISED DISTRIBUTOR/DEALER  
STAMP AND SIGNATURE**